

MAINTENANCE SCHEDULE FOR NPR/W4/4000

Item	Interval ↓	234K	240.5	247K	253.5	260K	266.5	273K	279.5	286K	292.5	299K	305.5	312K	318.5	325K	331.5	338K	344.5	351K
Engine Noise Check		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Idle Speed						I								I						
Valve Lash						A								A						
Injection Timing						I								I						
Engine Speed Governor (fuel set)						I								I						
Injector (Pressure & Spray)						I								I						
Engine Oil & Oil Filter		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Fuel Filter		R		R		R		R		R		R		R		R		R		R
Air Cleaner Filter		R				R				R				R				R		
Air Intake (Duct/Hose/Clamp)		I				I				I				I				I		
Drive Belts						R								R						
Engine Bolt Torque						I								I						
Turbocharger																				
Rotate Tires		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Engine Cooling System		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Exhaust System		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Fuel Line System		I		I		I		I		I		I		I		I		I		I
Brake Lining & Pad for Wear		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Drum for Wear & Damage		I				I				I				I				I		
Brake Fluid		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Line LSV and Hoses		I				I				I				I				I		
Automatic Transmission Fluid		R	I	I	I	R	I	I	I	R	I	I	I	R	I	I	I	I	I	I
Auto/Tran Screen & Filter (*)		R				R				R				R				R		
Differential Gear Oil		R	I	I	I	R	I	I	I	R	I	I	I	R	I	I	I	I	I	I
Power Steering Fluid						R					R					R				
Steering Gear Box Torque		T				T				T				T				T		
Propeller Shaft Flange Torque		T		T		T		T		T		T		T		T		T		
Leaf Spring U-Bolt Torque			T		T		T		T		T		T		T		T		T	
Wheel Nut Torque		T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T
Steering Shaft & Drag Link		L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
King Pins		L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
Propeller Shaft		L		L		L		L		L		L		L		L		L		L
Wheel Bearing Grease						R					R					R				
Rear Spring Pins		L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L

(I): Inspect, replace or adjust if necessary (A): Adjust (R): Replace (T): Tighten to specified torque (L): Lubricate (*): Item added