

MAINTENANCE SCHEDULE FOR NPR/W4/4000

Item	Interval ↓	110,5	117K	123,5	130K	136,5	143K	149,5	156K	162,5	169K	175,5	182K	188,5	195K	201,5	208K	214,5	221K	227,5
Engine Noise Check		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Idle Speed									I								I			
Valve Lash									A								A			
Injection Timing									I								I			
Engine Speed Governor (fuel set)									I								I			
Injector (Pressure & Spray)									I								I			
Engine Oil & Oil Filter		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Fuel Filter			R		R		R		R		R		R		R		R		R	
Air Cleaner Filter					R				R				R				R			
Air Intake (Duct/Hose/Clamp)					I				I				I				I			
Drive Belts									R								R			
Engine Bolt Torque									I								I			
Turbocharger																				
Rotate Tires		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Engine Cooling System		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Exhaust System		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Fuel Line System			I		I		I		I		I		I		I		I		I	
Brake Lining & Pad for Wear		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Drum for Wear & Damage					I				I				I				I			
Brake Fluid		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Line LSV and Hoses					I				I				I				I			
Automatic Transmission Fluid		I	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R	I	I	I
A/T Screen & Filter (*)					R				R				R				R			
Differential Gear Oil		I	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R	I	I	I
Power Steering Fluid					R					R					R					R
Steering Gear Box Torque					T				T				T				T			
Propeller Shaft Flange Torque			T		T		T		T		T		T		T		T		T	
Leaf Spring U-Bolt Torque		T		T		T		T		T		T		T		T		T		T
Wheel Nut Torque		T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T
Steering Shaft & Drag Link		L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
King Pins		L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
Propeller Shaft			L		L		L		L		L		L		L		L		L	
Wheel Bearing Grease					R					R					R					R
Rear Spring Pins		L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L

(I): Inspect, replace or adjust if necessary (A): Adjust (R): Replace (T): Tighten to specified torque (L): Lubricate (*): Item added