



Enclosure Base (KY Spec A)

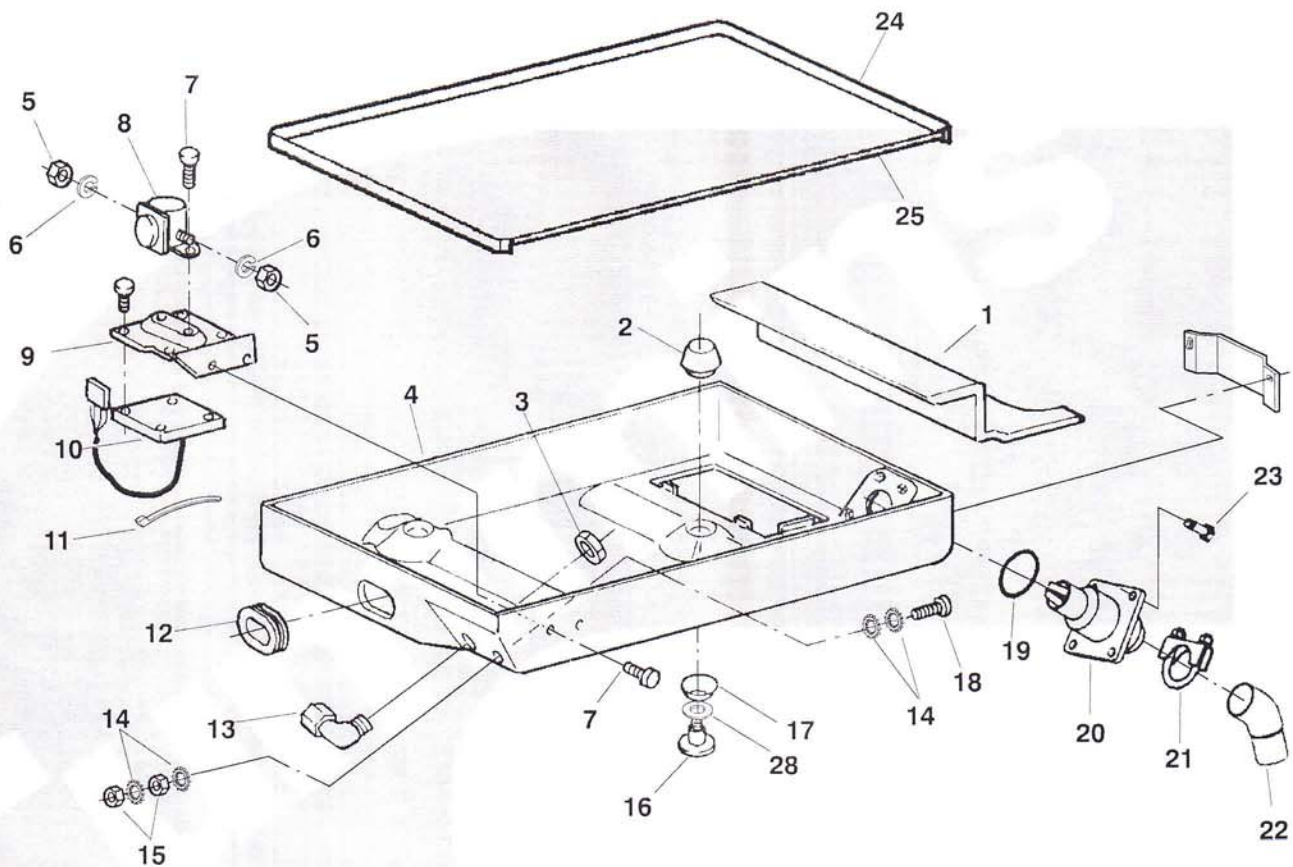


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-4306	1	Insulation, Exhaust	16	541-0540	3	Screw, Isolator Mounting (Includes Washer)
2	402-0640	3	Isolator, Mounting	17	402-0641	3	Isolator, Snubber
3	331-0041	1	Nut, Lock	18	816-0101	1	Bolt, Carriage (5/16-18 x 1-1/4")
4	405-4305-01	1	Base, Enclosure	19	155-2677-01	1	Gasket, Resonator
5	868-0002	2	Nut, Hex (5/16-24)	20	155-2675	1	Adapter, Resonator
6	850-0045	2	Washer, Spring Lock (5/16") 60 Hz	21	155-2715	1	Clamp, Exhaust (1-3/4")
	850-0045	4	50 Hz	22			Elbow, Exhaust
7	823-1002-01	9	Screw, Torx Pan Head (M6 x 1 x 12mm)		155-2676	1	45° Angle
8	307-2586	1	Relay, Start Solenoid (K1)		155-2682	1	90° Angle
9	319-1279-01	1	Bracket, Control	23	800-0730	1	Screw, Cap - Hex Head (5/16-18 x 1")
10	300-4155	1	Board, PC	24	405-4755-02	1	Edging, Base Pan (1675mm)
11	332-0942	2	Tie, Cable	25	508-1083-01	1	Edging, Base Pan (683mm)
12	508-0315	1	Grommet, Enclosure Base	26	526-0029	3	Washer
13	331-0521	1	Elbow, Conduit				
14	856-0008	4	Washer, EIT Lock (5/16")				
15	862-0015	2	Nut, Hex (5/16-18)				

“Blank Page”

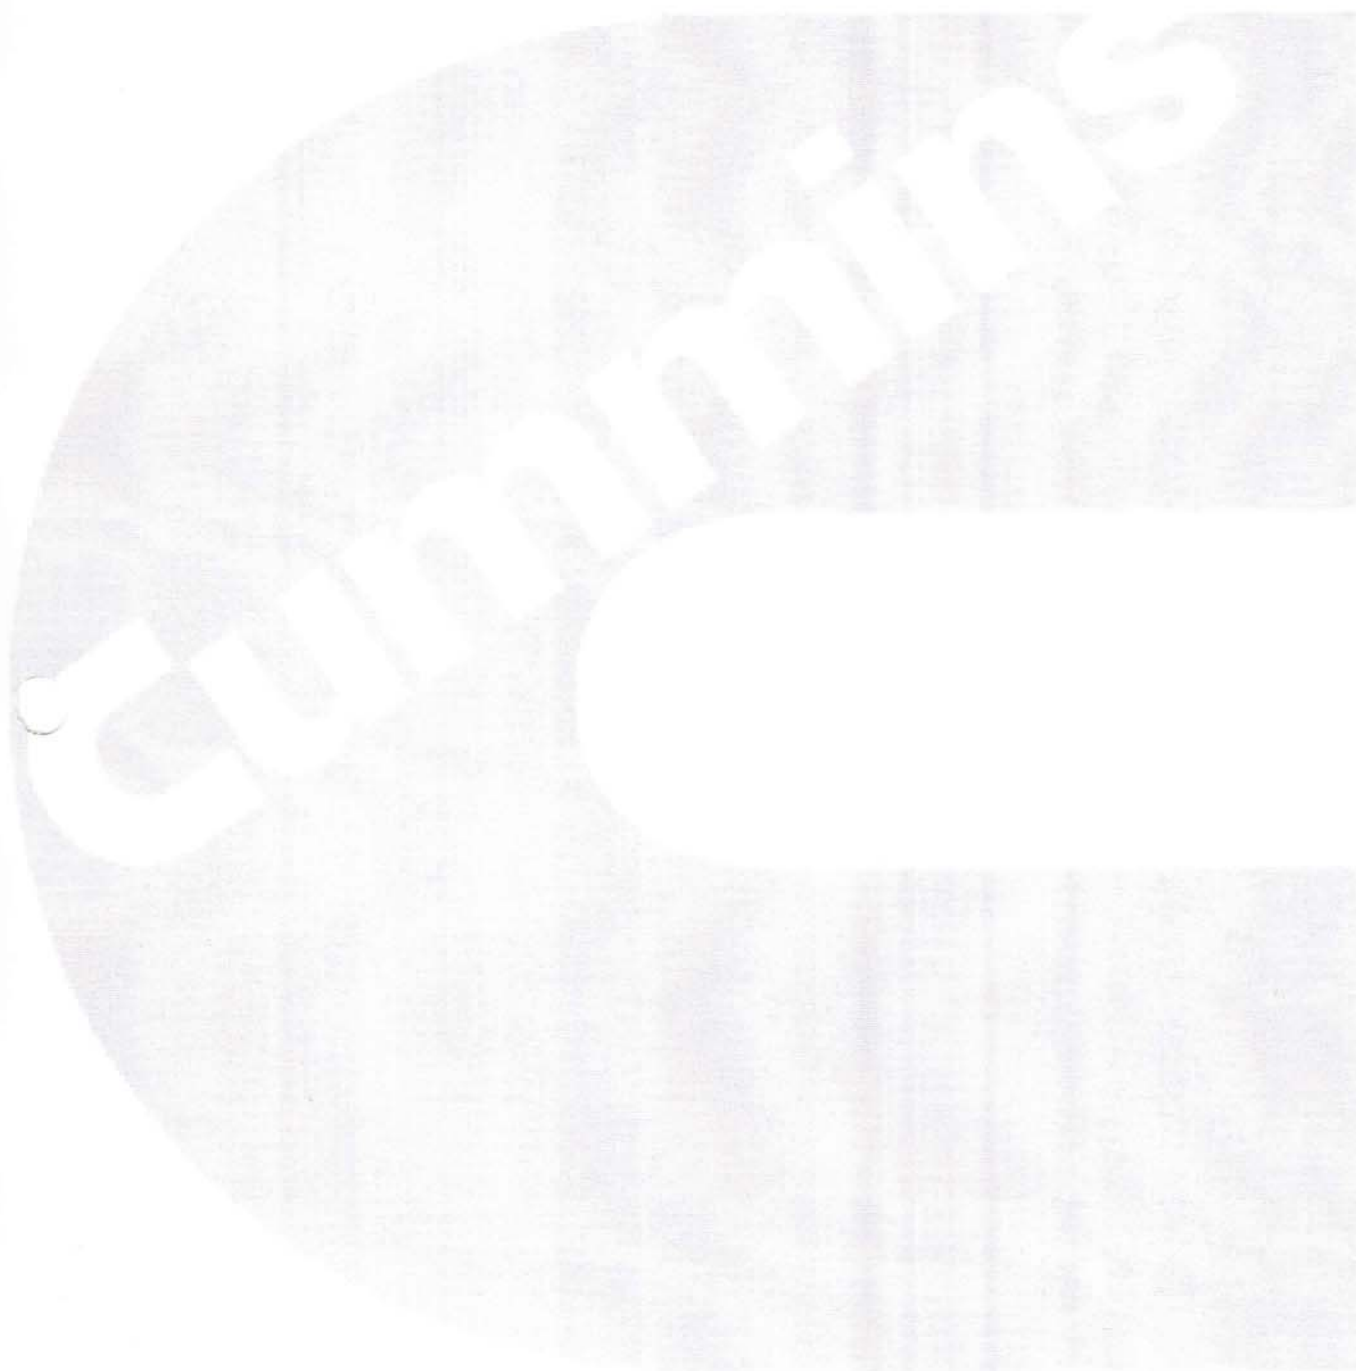

Enclosure Base (KY Spec B-P)

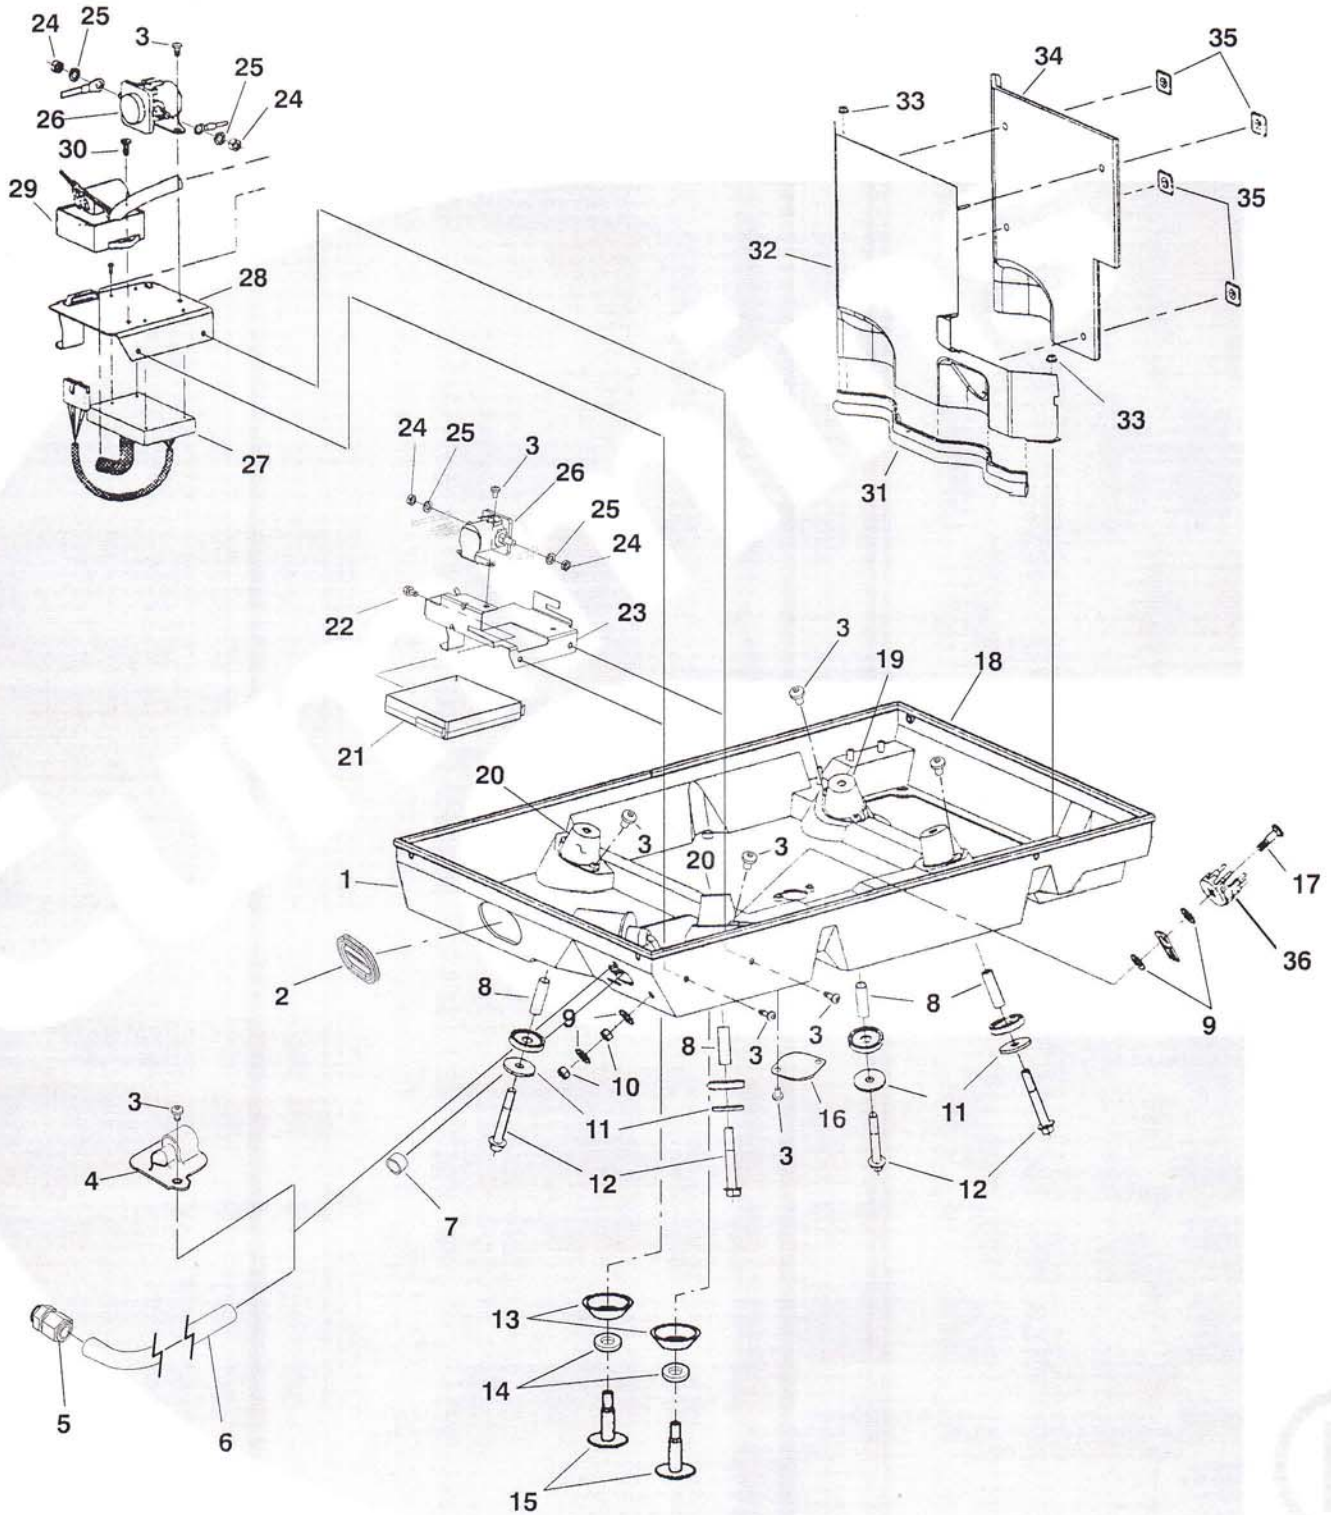


Enclosure Base (KY Spec B - P)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-5811-02		Base, Enclosure	405-4964-02	1		Spec B-D
2	508-0315	1	Grommet, Enclosure Base	102-1456-02	1		Begin Spec E
3	823-1002-03	14	Screw, Pan Head Torx Machine (M6 x 1 x 10mm)				LP
4	331-0539-02	1	Clamp, Conduit (Not Included With Spec 11580 or 11320)	102-1456-02	1		Begin Spec D
5	331-0115	1	Connector, Straight (1/2" Pipe Thread) (Spec 11580)	17	800-0030	1	Bolt, Carriage (5/16-18 x 1-1/4")
6	331-0255	1	Conduit (1/2" x 36") (Spec 11580)	18	508-1093-01	1	Edging (2388mm)
7			Bushing	19	402-0664-02	2	Isolator, Engine End
	508-0208	1	Snap (Begin Spec F Except Spec 11580 G & H)	20	402-0664-01	2	Isolator, Generator End
	331-0545	1	Armor (Spec 11580 G & H only)	21	327-1413	1	Board, PC (Begin Spec J)
8	402-0686-02	4	Tube, Spacer (Gasoline Spec B-D; LP Spec B, C)	22	815-0943-02	1	Screw, Torx Pan Head (Begin Spec J)
9	856-0008	4	Washer, EIT Lock (5/16")	23	319-3811-02	1	Bracket, Control (Begin Spec J)
10	862-0015	2	Nut, Hex (5/16-18)	24	868-0002	2	Nut, Hex (5/16-24)
11	526-0014	4	Washer, Flat (7/16") (Gasoline Spec B-D; LP Spec B, C)	25	850-0045	2	Washer, Spring Lock (5/16")
12			Screw, Hex Head Thread Forming (M10 x 1.5 x 70mm) Gasoline	26	307-2586	1	Relay, Start Solenoid (K1)
	815-0842-05	4	Spec B-D (Hex Head)	27			Board, PC
	815-0874-01	4	Begin Spec E (Socket Head)		300-4320	1	Spec B-E
			LP		300-4923	1	Spec F-H
	815-0842-05	4	Spec B, C	28	319-2152-03	1	Bracket, Control (Spec B-H) Gasoline Units) (Spec B-H)
	815-0874-01	4	Begin Spec D	29			*Regulator, Voltage (VR1) (Spec B-H) (60Hz, 120V, Gasoline Units)
13	402-0641	2	Isolator, Snubber (Gasoline Begin Spec E; LP Begin Spec D)		305-0851	1	60 Hz
14	526-0032	2	Washer, Flat (Gasoline Spec E; LP Spec D)		305-0866	1	50 Hz
15			Screw, Isolator	30	823-1002-04	1	Screw, Torx Pan Head (Spec B-H) (M6 x 14mm)
	541-0540	2	Spec D/E-H (Includes Washer) (Gasoline Spec E; LP Spec D)	31			Seal, Barrier Edge (Spec B-M)
	815-0785	2	Begin Spec J		508-0330	1	(Spec P)
16			Cover, Drain Gasoline	32	A035K028	1	Shield, Exhaust (Spec B-P)
				33	870-2054	2	Nut, Flange Lock (M6 x 1)
				34	405-4895	1	Insulation, Exhaust Barrier
				35	518-0581	4	Nut, Push-On
				36	332-3108	1	Ground Terminal

* - Voltage regulator Spec J-M included on PCB 327-1413.


Enclosure Base (KYD)

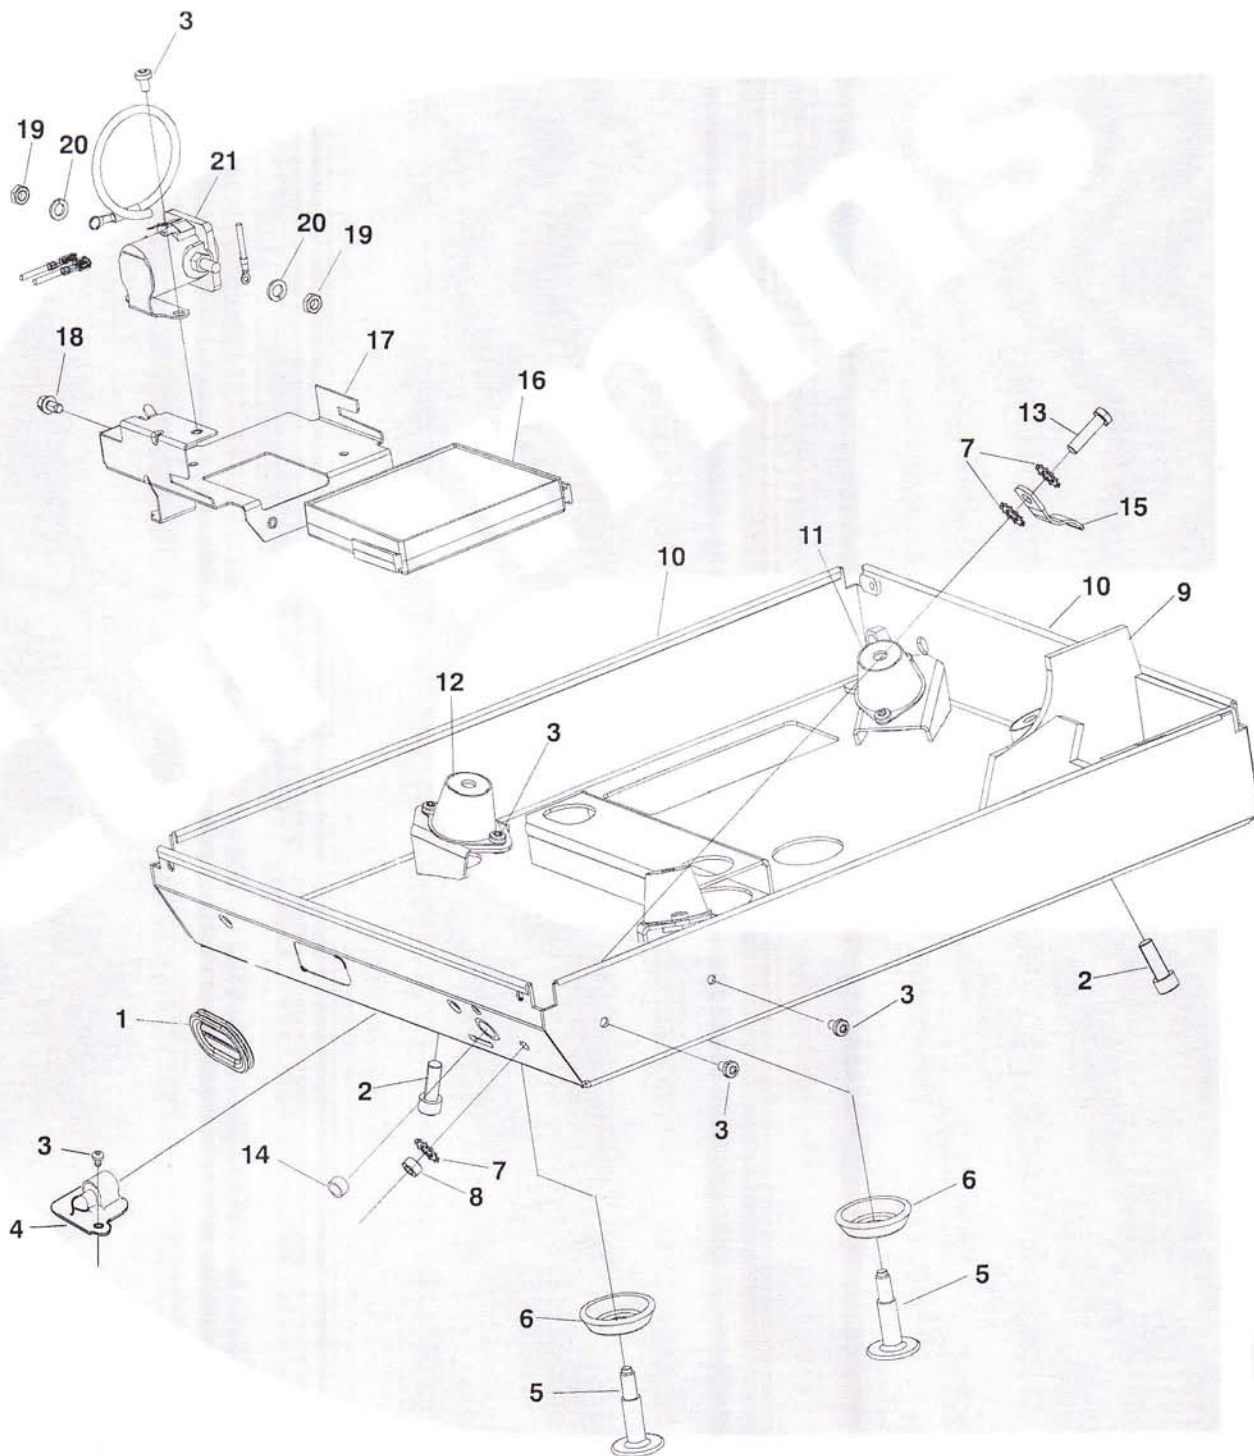

Enclosure Base (KYD)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	508-0315	1	Grommet, Enclosure Base	12	402-0664-01	2	Isolator, Mount
2	815-0874-01	4	Screw, SKT TH Head Torx	13	800-0030	1	Screw, Hex Head (5/16-18 NC x 1.25)
3	815-0578	10	Screw, Pan Head Torx (M6 x 1 x 12mm)	14	508-0208	1	Bushing, Snap
4	331-0539-02	1	Clamp, Conduit	15	337-3467	1	Strap, Bond
5	815-0785	2	Screw, Isolated Mounting	16	327-1413	1	PCB, Control
6	402-0641	2	Isolator, Snubber	17	319-3811-02	1	Bracket, Control Mounting
7	856-0008	3	Washer, EIT Locking (5/16")	18	815-0943-02	1	Screw, Hex Washer Head Thread Forming (1/4-20 x .5")
8	862-0015	1	Nut, Hex (5/16-18 UNC)	19	868-0002	2	Nut, Hex Jam (5/16-24UNC)
9	405-7661	1	Shield, Exhaust Insulation	20	850-0045	2	Washer, Split Locking (5/16")
10	508-0333	4	Edging	21	307-2586	1	Relay, Start Solenoid
11	402-0664-02	2	Isolator, Mount				


Generator Enclosure (KY Spec A)

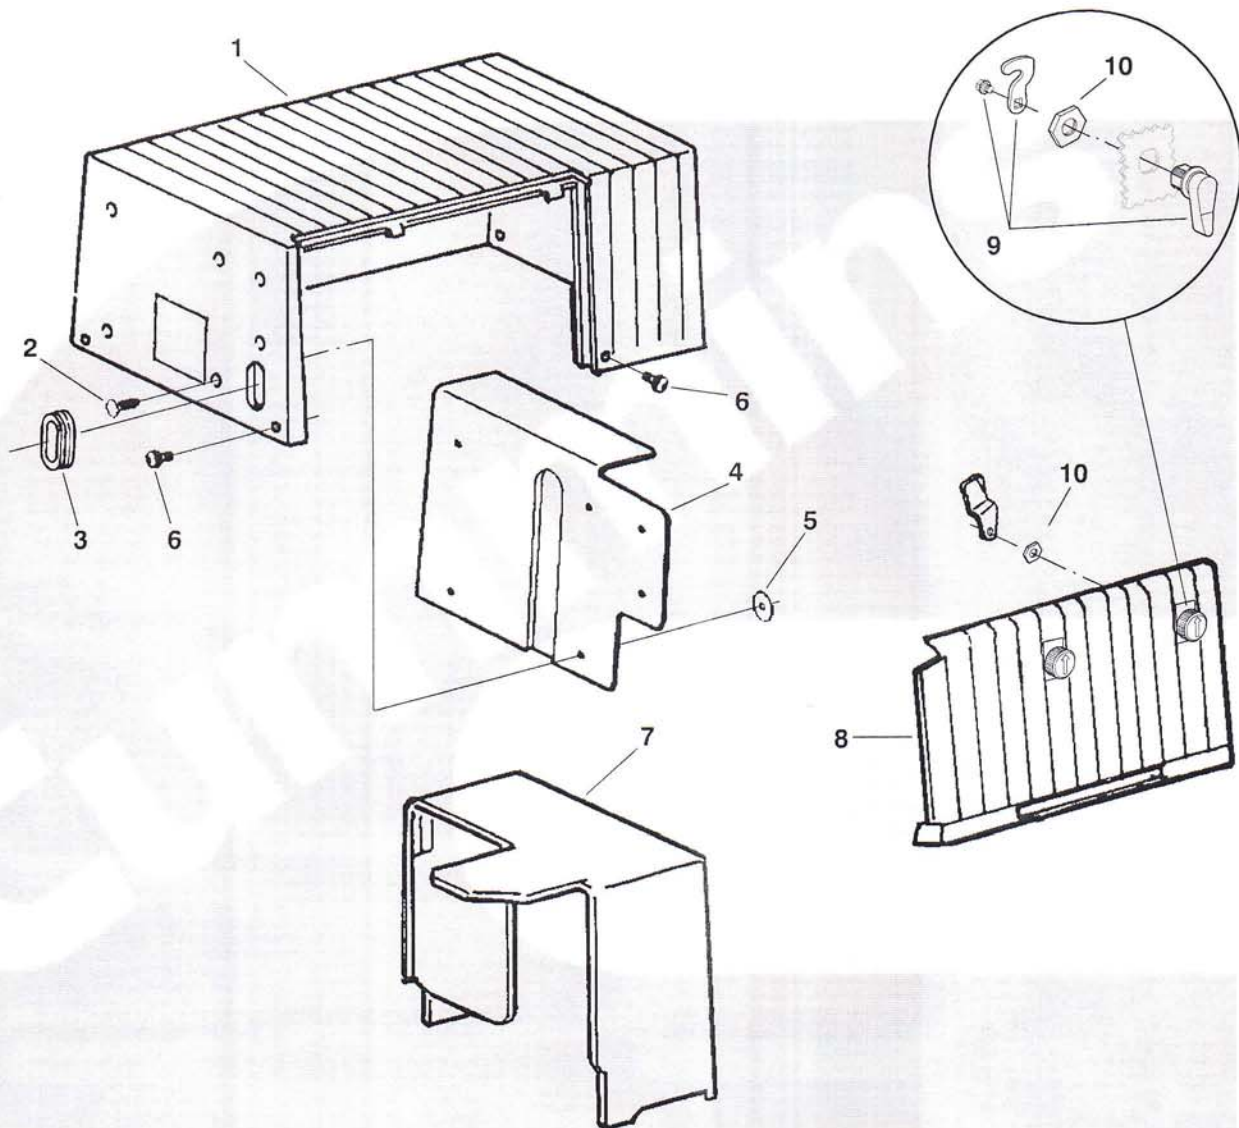


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1		1	Cover Assy, Enclosure (Includes Parts Marked *)				Latches, Insulation, Label, Gasket and Washers)
2	518-0623	6	*Clip, Christmas Tree	9	406-0779	2	Latch Assy, Service Panel (Later Spec A)
3	508-0315	1	*Grommet, Remote	10	870-2198	2	Nut, Hex (M22 x 1.5)
4	405-4308	1	*Insulation, Inlet				
5	526-0394	6	*Washer, Flat (Special)				
6	823-0010-01	5	Screw, Shoulder Torx (M6 x 14mm)				
7	405-4307-02	1	Insulation, Upper Exhaust Baffle				
8	405-6384-01	1	*Panel, Service (Includes				

* - Parts Included in Enclosure Cover.

“Blank Page”

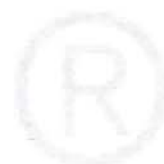

Generator Enclosure (KY Begin Spec B and KYD)

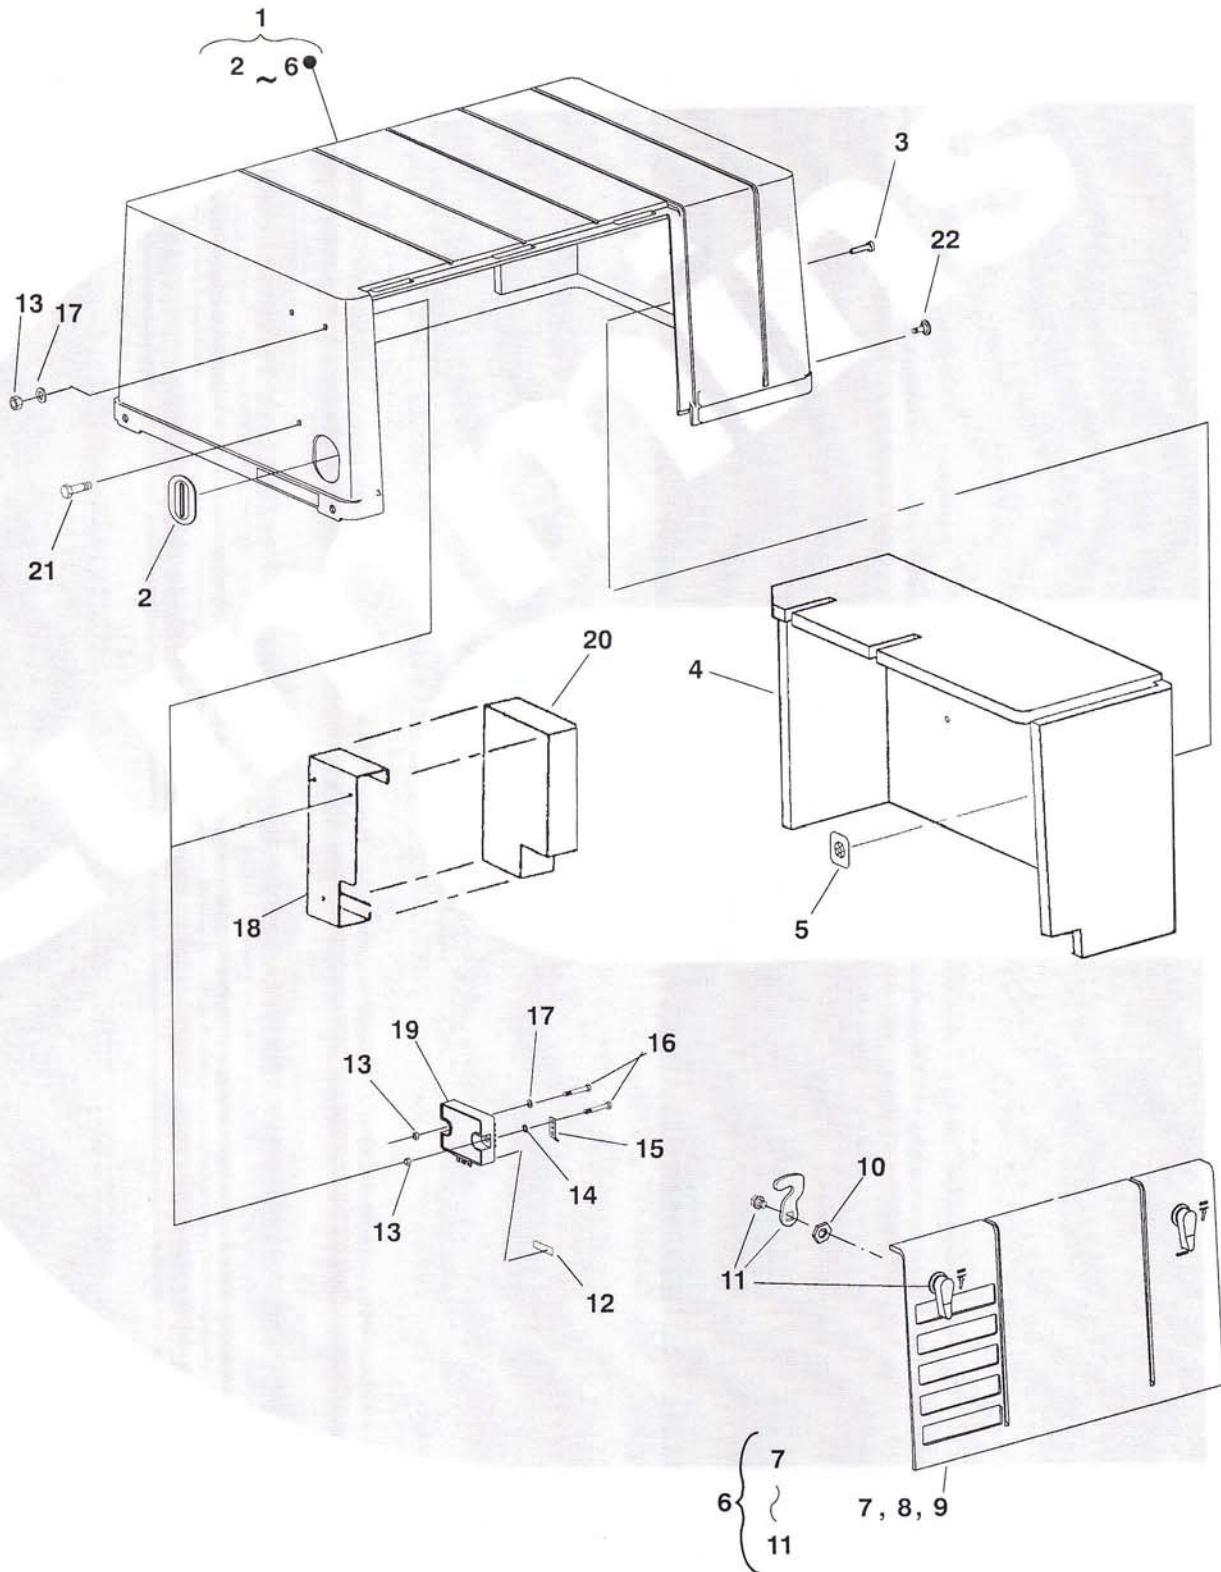


Generator Enclosure (KY Begin Spec B and KYD)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-0556-01	1	Kit, Enclosure Cover Includes (KY Enclosure Cover Assy.)	13	870-2062	4	Nut, Lock (M5 x .8) (50Hz, 100V-60Hz)
1			Cover Assy, Enclosure (Includes Parts Marked *)	14	856-0003	1	Washer, EIT (#10) (50Hz, 100V-60Hz)
	405-6383-01	1	KY	15	332-3292	1	Terminal, Spade (50Hz, 100V-60Hz)
	405-7552	1	KYD	16	800-2012	2	Screw, Hex Head Cap (M5 x .8 x 30mm) (50 Hz, 100V-60Hz)
2			*Grommet	17	526-0009	3	Washer, Flat (M5) (50 Hz, 100V-60Hz)
	508-0315	1	KY Spec B-E	18	405-4967-03	1	Bracket, Inlet Insulation (60 Hz) (Spec B-H)
	508-1116	1	KY Begin Spec F and KYD	19	305-0784	1	Charger, Battery (50 Hz, 100V-60Hz)
3	818-0226-02	2	*Rivet	20	405-4966	1	Insulation, Inlet (60 Hz) (Spec B-H)
4			*Insulation, Cover	21	823-1002-01	3	Screw, Torx Pan Head (M6 x 1 x 12mm) (60 Hz) (Spec B-H)
	405-4894	1	KY Begin Spec B	22	823-0010-01	4	Screw, Torx Shoulder (M6)
	405-7662	1	KYD				
5	518-0581	2	*Nut, Push-On				
6			*Panel Assy, Service Onan (Includes Parts Marked +)				
	405-6384-01	1	Onan Green				
	405-6384-02	1	Onan Marine White				
	405-6384-03	1	Onan Camp Power Grn				
7	405-6384-01	1	+ Insulation, Door				
8	526-0394	3	+ Washer, Flat (Special)				
9	405-4311-01	1	+ Gasket, Service Panel (250mm)				
10	870-2198	2	+ Nut, Hex (M22 x 1.5)				
11	406-0779	2	+ Latch Assy, Service Panel (Includes Pawl and Latch)				
12	98-6806	1	Label, Charger				

* - Included in Enclosure Cover Assy.

+ - Included in Service Panel Assy.


Underfloor Mounting Kit (KY Begin Spec B)

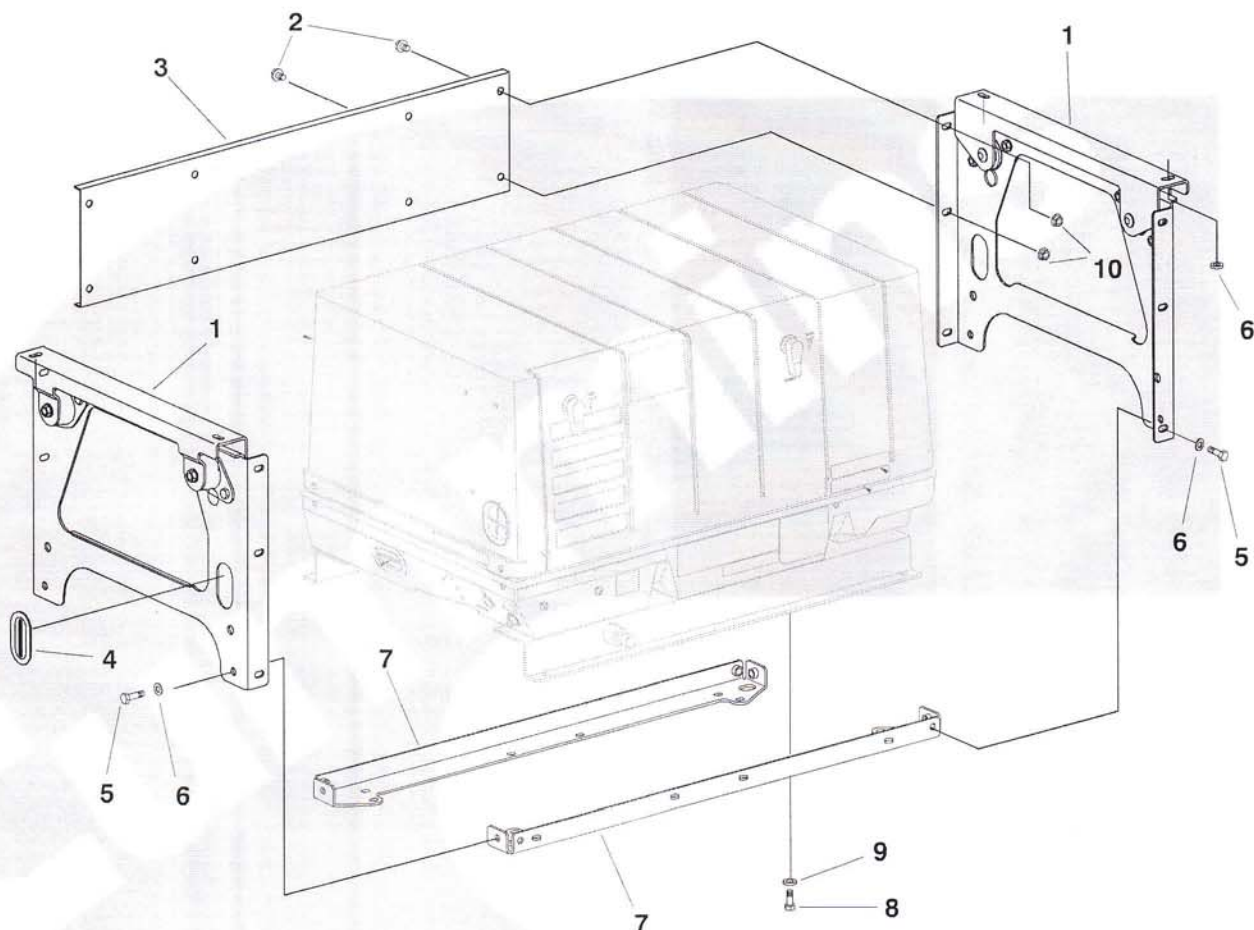

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	A030X652	1	Kit, Underfloor Mounting
1	403-3672	2	Panel, Underfloor
2	821-0014	4	Screw, Hex Head Lock Flange (5/16-18 x .5")
3	403-3396-02	1	Panel, Back
4	508-0315	1	Grommet, Remote
5	800-0048	8	Screw, Hex Head Cap (3/8-16 x .75")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	526-0174	12	Washer, Flat (3/8" Hardened)
7	403-3669-02	2	Rail, Underfloor
8	800-0026	6	Screw, Hex Head Cap (5/16-18 x .75")
9	526-0122	6	Washer, Flat (5/16" Hardened)
10	870-0513-02	4	Nut, Hex Flange Lock (5/16-1)


Underfloor Mounting Kit (KYD)

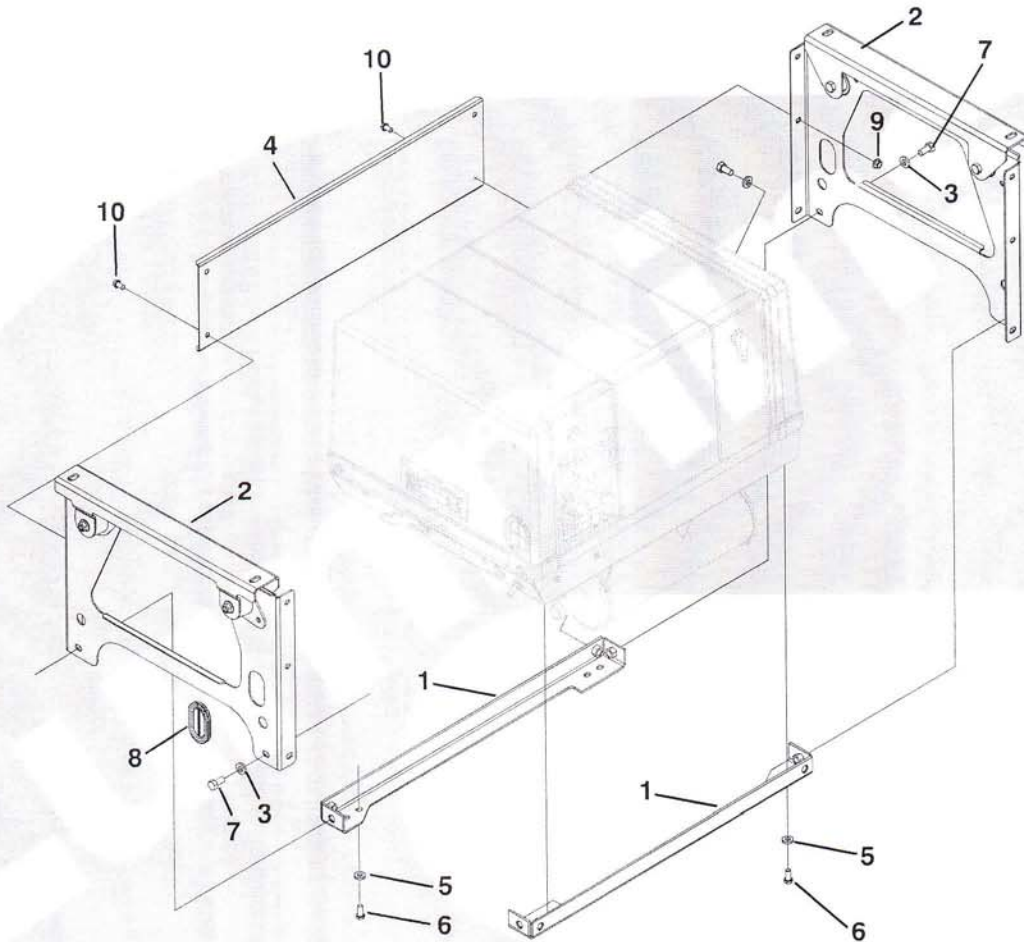

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-0938	1	Kit, Mounting (Underfloor)
1	403-5135-02	2	Rail, Mounting
2	403-3672	2	Panel, Under Floor
3	526-0174	8	Washer, Flat
4	403-5136-02	1	Mount, Generator
5	526-0122	4	Washer, Flat (5/16")
6	800-0026	4	Screw, Hex Head Cap (5/16-18 x .75")


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	800-0048	8	Screw, Hex Head Cap (5/8-16 x .75")
8	508-0315	1	Grommet, Remote
9	870-0513-02	4	Nut, Hex Flanged (5/16")
10	821-0014	4	Screw, Locking Head (5/16-18 x 1/2")

Underfloor Mounting Kit (KY Spec A)

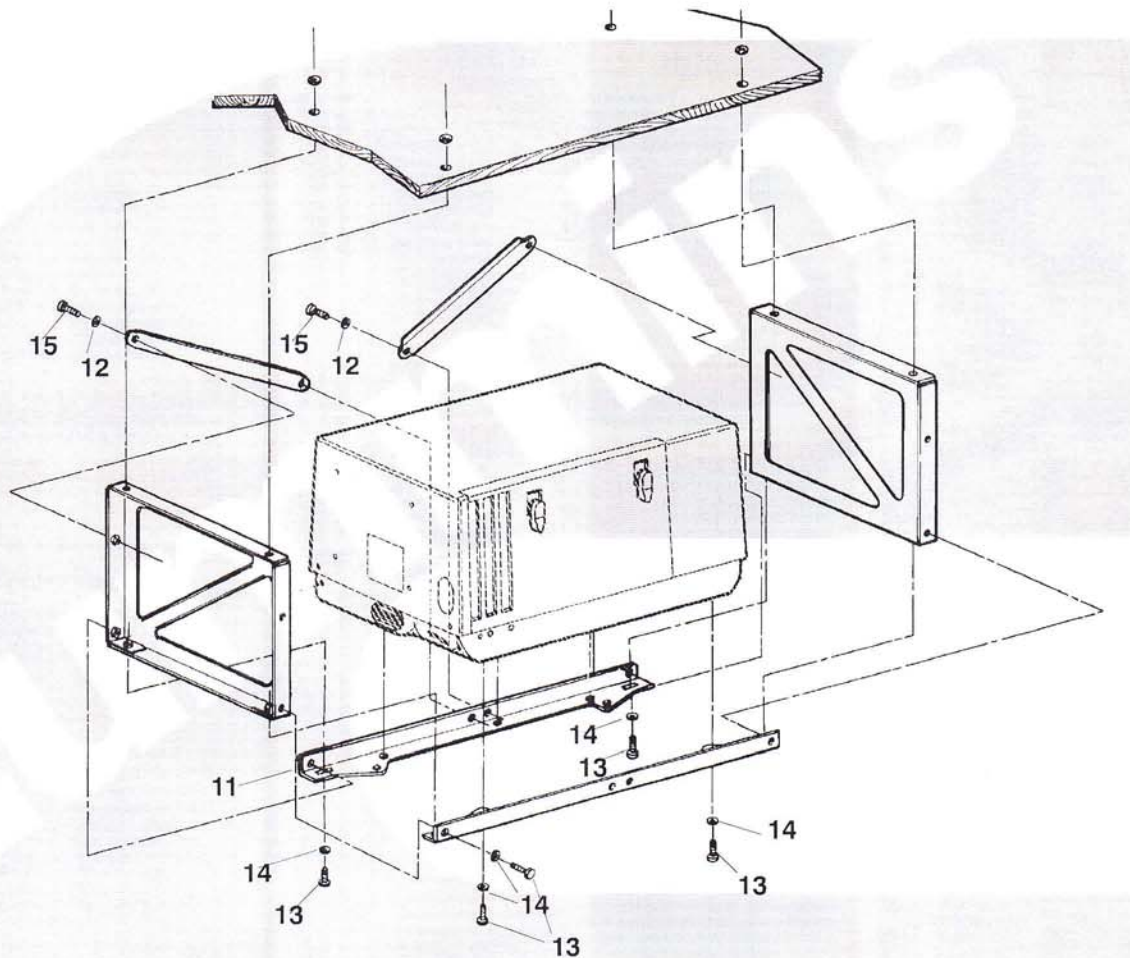

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	A030X652	1	Kit, Underfloor Mounting (Replaced by 403-3670)				
11	403-3581-04	1	Rail, Bottom (w/o Weldnuts)	14	526-0122	6	(5/16-18 x 3/4") Washer, Flat (5/16")
12	526-0174	16	Washer, Flat (3/8")	15	800-0049	12	Screw, Hex Head Cap (3/8-16 x .88")
13	800-0026	6	Screw, Hex Head Cap				

KY Underfloor Housing/Base Kit

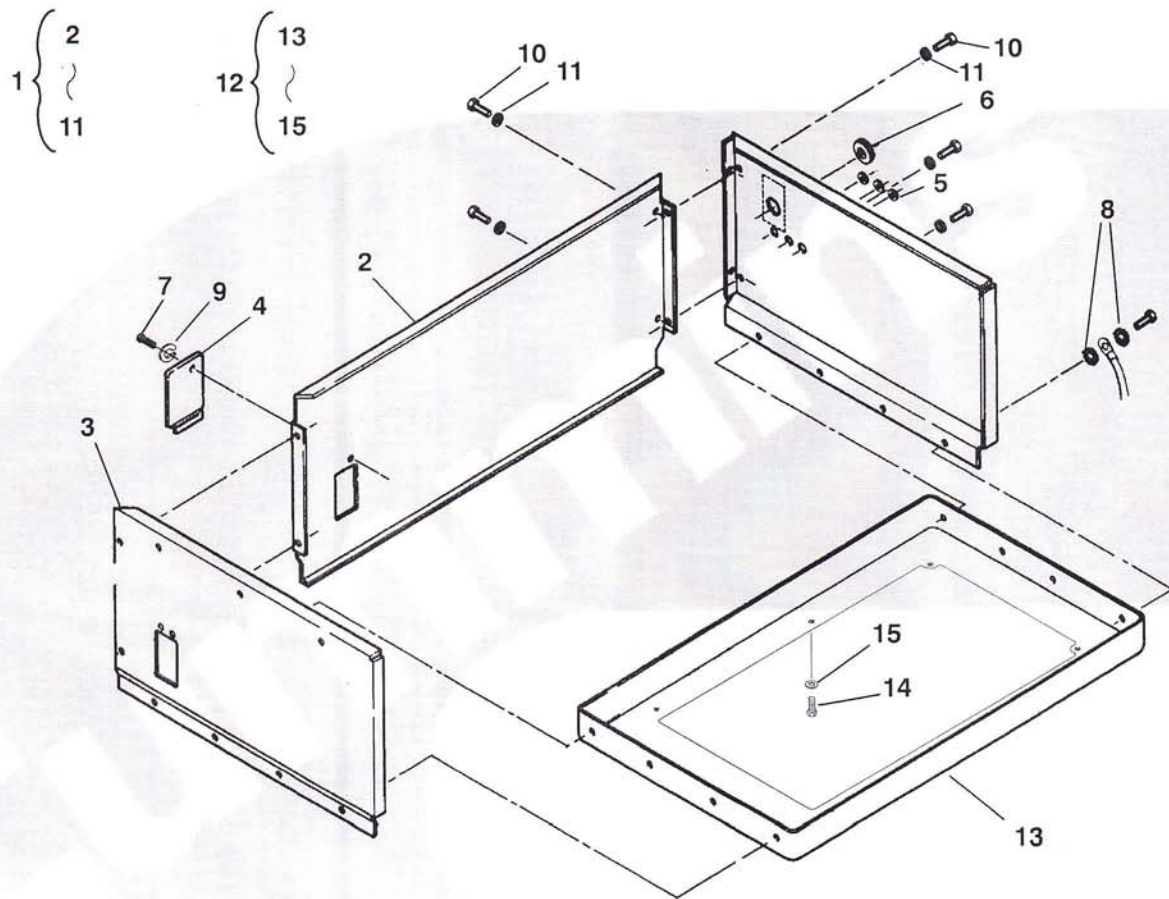


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-4241	1	Kit, Housing (Includes Parts Marked +)
2	405-4662-S0	1	+ Panel, Housing (Rear)
3	405-4663-S0	1	+ Panel, Housing (LH)
4	405-4668-01	1	+ Cover, Panel
5	508-0071	3	+ Grommet, Rubber (.62 Id)
6	508-0055	1	+ Grommet, Rubber (1.50 Id)
7	813-0098	1	+ Screw, RH (#10-32 X.375)
8	856-0008	2	+ Washer, EIT Lk (5/16)
9	850-0030	1	+ Washer, Lock (#10)
10	800-0026	16	+ Screw, Hex Head Cap (5/16-18 X .75)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11	526-0122	22	+ Washer, Flat (5/16")
12	403-3630	1	Kit, Underfloor Base (Includes Parts Marked *)
13	403-3631-02	1	*Base, Underfloor
14	800-0026	14	*Screw, Hex Head Cap (5/16-18 X .75)
15	526-0122	22	+ Washer, Flat (5/16)

* - Parts Included in Base Kit.

+ - Parts Included in Housing Kit.


Generator/Control (KY Spec A)

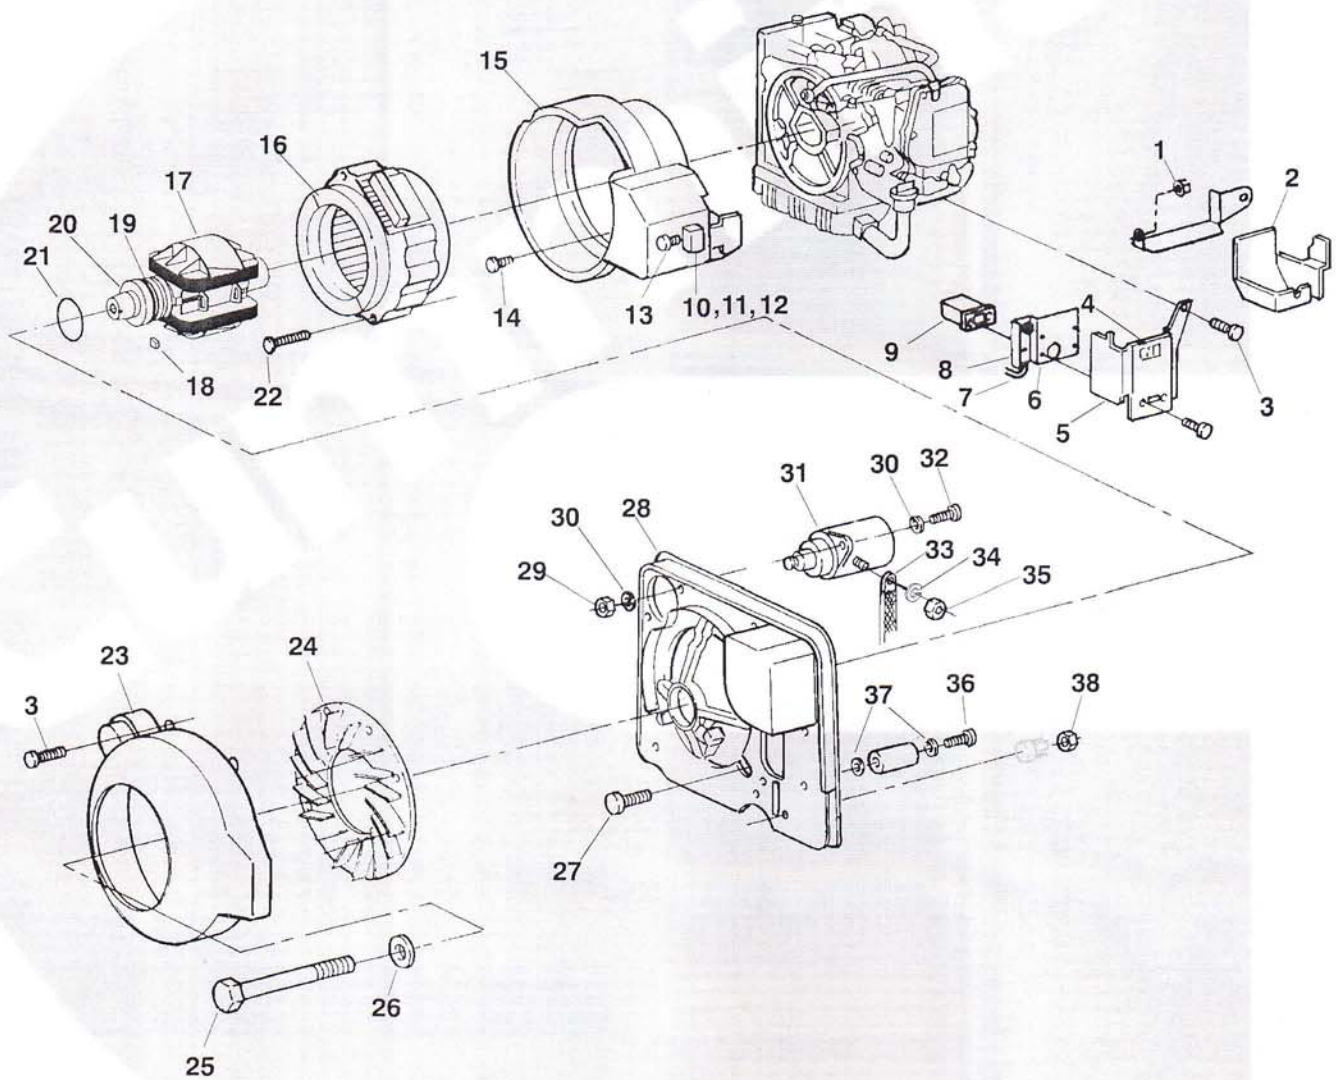

Generator/Control (KY Spec A)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-2054	1	Nut, Locking Flange (M6 x 1) (LP)	18	515-0289	1	Key, Fan Hub
2	145-0619	1	Shield, Carburetor (Gasoline)	19	204-0141	1	Ring, Collector
3	823-0009-01	5	Screw, Torx Pan Head (M6 x 1 x 14mm)	20	510-0216	1	, Rotor
4	308-0969	1	Bezel	21	509-0285	1	O'Ring
5			Panel, Control	22	815-0787	2	Screw, Torx Socket Head (M6 x 1 x 70mm)
	319-1412	1	60 Hz	23	134-4918	1	Housing, Scroll
6	517-0133	1	Plug, Hole (50 Hz)	24	205-0199-S0	1	Wheel Assy, Blower
7	303-0303	1	Potentiometer Assy (R5) (50 Hz) (Includes Lead, Bracket and Potentiometer)	25	815-0778	1	Bolt, Rotor Thru (3/8-24 x 9.5")
8	303-0275	1	Potentiometer (R5) (50 Hz)	26	526-0392	1	Washer, Fan Hub
9			Breaker, Circuit (CB1)	27	823-0003-03	3	Screw, Torx Pan Head (M6 x 1 x 20mm)
	320-1323	1	60 Hz (30 Amp)	28		1	Endbell Assy (See Separate Page for Components)
	320-1780-01	1	50 Hz (15 Amp)	29	750-1006	2	Nut, Hex (M8)
10	166-0784-S0		Coil Assy, Ignition (Includes Spark Plug Terminal and Boot)	30	740-1006	4	Washer, Flat (M8)
11	167-0267	1	Terminal, Spark Plug	31	191-2351	1	Starter (B1) (See Separate Page for Components)
12	167-0265	1	Boot, Spark Plug	32	720-1038	2	Screw, Hex Head Cap (M8 x 30mm)
13	823-0002-04	2	Screw, Torx Pan Head (M4 x .7 x 12mm)	33	226-4297	1	Cable, Starter
14	823-0007-02	4	Screw, Torx Pan Head (M8 x 1.25 x 25mm)	34	850-0040	1	Washer, Lock-Spring (1/4")
15	220-4572-01	1	Housing, Stator	35	862-0001	1	Nut, Hex (1/4-20)
16			Stator, Generator	36	823-0008	1	Screw, Pan Head Torx (M4 x .7 x 60mm)
	220-4485-S1	1	60 Hz	37	304-0796	2	Washer, Center (M4)
	220-4485-S3	1	50 Hz	38	870-0236	1	Nut, Hex (#10-32)
17	201-3538-S0	1	Rotor Assy (Includes Bearing and Collector Ring)				

Generator (KY Begin Spec B and KYD)

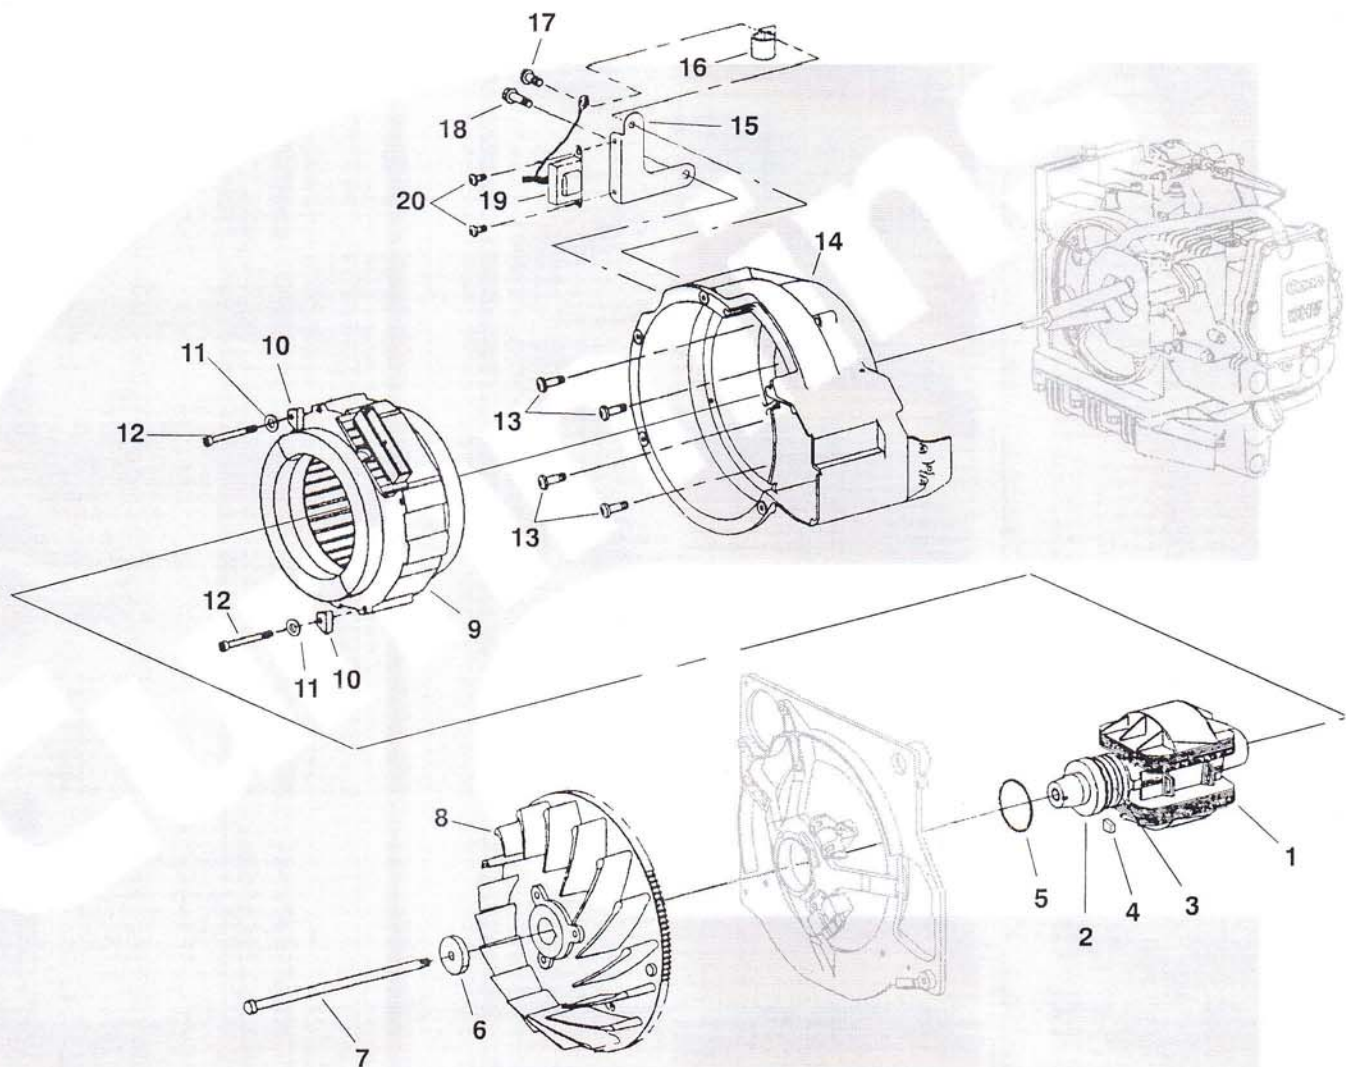


Generator (KY Begin Spec B and KYD)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Rotor Assy, (Includes Bearing)	12			Screw, Torx Socket Head
			60 Hz		815-0787	2	60 Hz (M6 x 1 x 70mm)
	201-3538-S0	1	Spec B-H		815-0936	2	50 Hz (M6 x 1 x 100mm)
	201-3539-S1	1	Begin Spec J				Begin Spec B
			50 Hz	13	823-0007-02	4	Screw, Pan Head - Torx
			Gasoline				Thread Forming
	201-3538-S0	1	Spec B-D				(M8 x 1.25 x 25mm)
	201-3539-S0	1	Begin Spec E	14			Housing, Stator
			LP				60 Hz
	201-3538-S0	1	Spec B-C				Begin Spec B
	201-3539-S0	1	Begin Spec D		220-4572-01	1	Gasoline Units
2	510-0216	1	Bearing, Rotor		220-4572-02	1	LP Units
3	204-0141	1	Ring, Collector				50 Hz
4	515-0289	1	Key, Hub		220-4572-03	1	Begin Spec B
5	509-0421	1	O'Ring	15	315-0735-03	1	Bracket, Transformer
6	526-0392	1	Washer, Fan Hub				(50 Hz, 100v-60Hz)
7	815-0778	1	Bolt, Rotor Thru				(Spec B-H)
			(3/8-24 x 9-1/2")	16	518-0515	1	Clip (50 Hz, 100v-60Hz)
8			Wheel Assy, Blower				(Spec B-H)
			(Includes Magnet)	17	823-0003-06	1	Screw, Torx Pan Head
	205-0199-S0	1	Spec B-H				Thread Forming
	205-0263	1	Begin Spec J				(50 Hz, 100v-60Hz)
9			Stator, Generator				(Spec B-H)
			60 Hz				(M6 x 1 x 12mm)
			Spec B-H	18	815-0829-04	1	Screw, Thread Hex Flange
	220-4485-S5	1	120V				Forming (M8 x 1.25 x 16mm)
	220-4485-04	1	100V				(Spec B-H) (50 Hz,
			Begin Spec J				100V-60Hz)
	220-4586-S1	1	120V	19	315-0736	1	Transformer, Voltage (T1)
	220-4586-02	1	100V				(Spec B-H) (50 Hz,
			50 Hz				100V-60Hz)
			Gasoline	20	823-1002-01	2	Screw, Pan Head Torx
	220-4485-S3	1	Spec B-D				Machine (M6 x 1 x 12mm)
	220-4490-S1	1	Spec E-H				(Spec B-H) (50 Hz,
	220-4586-11	1	Begin Spec J				100V-60Hz)
			LP				
	220-4485-S3	1	Spec B-C				
	220-4490-S1	1	Spec D-H				
	220-4586-11	1	Begin Spec J				
10			Clamp (50Hz)				
	232-3881	2	Spec B-H (Angled)				
	232-4030	2	Begin Spec J (Flat)				
11	526-0018	2	Washer, Flat (60Hz) (Begin Spec J)				

When a Rotor is ordered for KY Spec A or B prior to Serial #H943219685 then use a 201-3538-S0 Rotor and one of the Following Stators unless it has already been replaced:


60Hz - Spec A, Order 220-4485-S1
60Hz - Spec B Order 220-4485-S5
50Hz - Spec A or B Order 220-4485-S3

Control (KY Spec B-H)

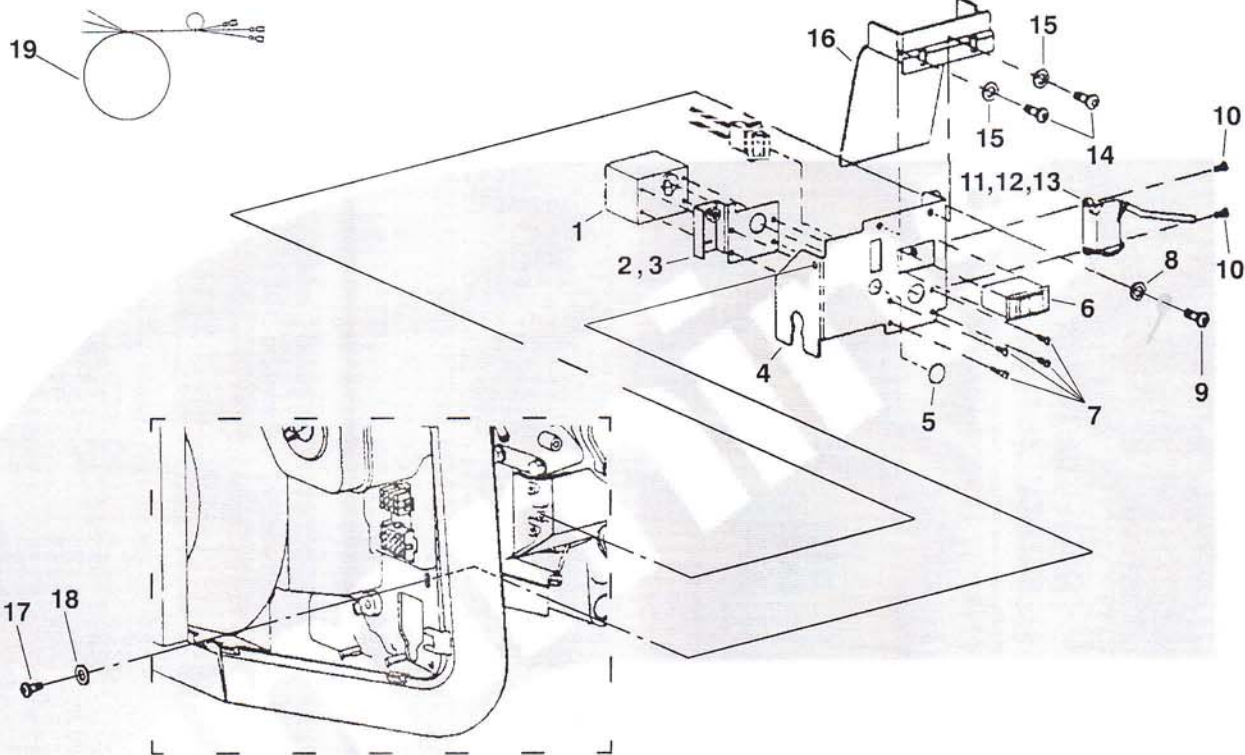


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Breaker, Circuit (CB1)	8	853-0013	1	Washer, ET Lock (1/4")
	320-1323	1	60 Hz	9	823-0003-06	1	Screw, Torx Pan Head
	320-1780-02	1	30A (120V Sets)				Thread Forming
			20A (100V Sets)	10	823-0002-04	2	Screw, Torx Pan Head
			50 Hz				(M4 x .7 x 12mm)
	320-1780-01	1	15A	11	166-0818	1	Coil Assy, Ignition (T1-Ign)
	320-1780-03	1	17A				(Includes Terminal and Boot)
	320-1780-02	1	20A	12	167-0267	1	Terminal, Spark Plug
2	303-0308-01	1	Potentiometer Assy (R5)	13	167-1627	1	Boot, Spark Plug
			(50 Hz and 100V/60Hz)	14	823-0003-01	2	Screw, Torx Pan Head
			(Includes Lead, Bracket and Potentiometer)				(M6 x 1 x 10mm)
3	303-0275	1	Potentiometer (R5) (50 Hz and 100V/60Hz)	15	526-0018	2	Washer, Flat (1/4")
4			Panel, Control	16	145-0689	1	Shield, Carburetor
	319-2176-03	1	60 Hz	17	823-1002-03	1	Screw, Pan Head Torx
	319-2213-03	1	50 Hz				(M6 x 1 x 10mm)
5	517-0133	1	Plug, Hole (50 Hz Only)	18	526-0018	1	Washer, Flat (1/4")
6	308-0852	1	Switch, Start/Stop (S1)	19			Harness, AC Output
7			Screw, Cross Pan Head		338-2909	1	60 Hz
			Recessed w/ET (#6-32 x 1/4")		338-3049	1	50 Hz
			60 Hz				
	815-0549	2	120				
	815-0549	4	100V				
	815-0549	4	50 Hz				

Control Panel (KY Begin Spec J and KYD)

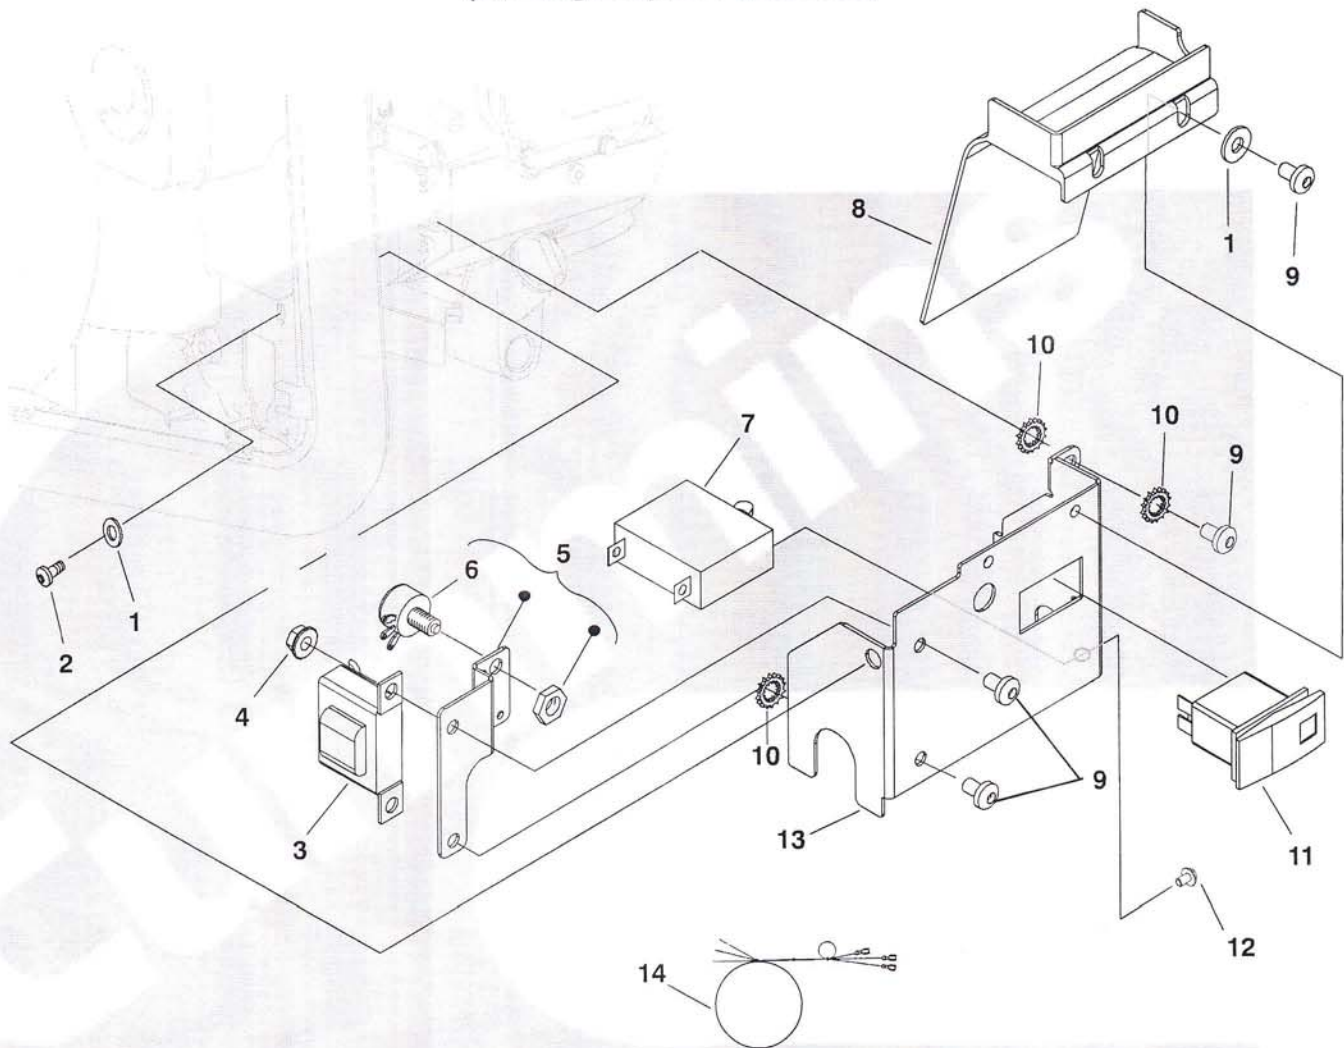

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	526-0018	3	Washer, Flat (1/4")				(M6 x 1 x 14mm)
2	815-0578	1	Screw, Pan Head Torx (M6 x 1 x 12mm)	10			Washer, ET Lock (1/4")
3	315-0736	1	Transformer, Voltage (T1) (100V, 230V)		853-0013	2	(120V, 60Hz)
4	870-2054	2	Nut, Lock Flange (100V, 230V)		853-0013	3	(100V, 230V)
5	303-0332	1	Potentiometer Assy (R5) (100V, 230V) (Includes Lead, Bracket and Potentiometer)	11	308-1038	1	Switch, Start/Stop (S1)
6	303-0331	1	Potentiometer (R5) (100V, 230V)	12			Screw, Cross Pan Head Recessed w/ET (#6-32 x 1/4")
7			Breaker, Circuit (CB1)		815-0549	2	120V
	320-1780-03	1	17A (Spec 26119, 33742)		815-0549	4	100V, 230V
	320-1780-02	1	20A (Spec 11429, 65697, 11572)	13	319-3844-02	1	Panel, Control
	320-1323	1	30A (Spec 11580, 26100, 26120)	14			Harness, AC Output
8	145-0689	1	Shield, Carburetor		338-3814	1	3-wire (Spec 11572, 11580, 26100, 26120)
9	815-0753	5	Screw, Torx Pan Head		338-3815	1	4-wire (Spec 11429, 26119, 33742, 65697)


Generator Harness (KY Spec A)

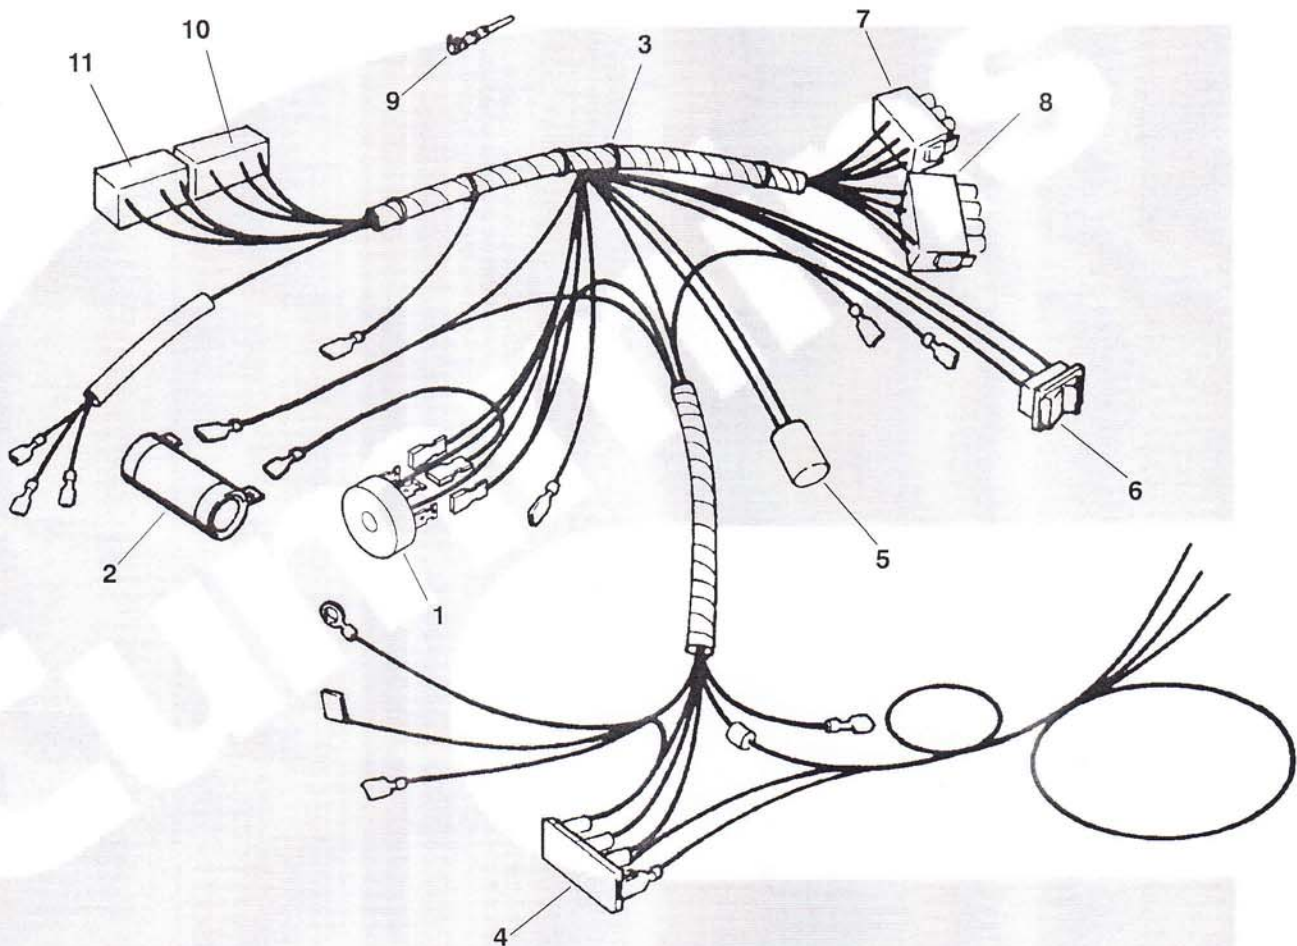

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	338-2568-01	1	Harness, Generator
	338-2568-02	1	60 Hz
1	305-0935	1	50Hz
2	304-0794	1	Rectifier, Bridge (CR1)
3	332-0942	13	Resistor (R1)
4	332-3108	1	Tie, Cable
			Terminal, Ground

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	321-0312-S1	1	Fuse (5 Ampere)(F1)
6	308-0968	1	Switch, Start/Stop (S1)
7	323-1314	1	Connector, Plug (12 Pin)(P4)
8	323-1252	1	Connector, Plug (15 Pin)(P1)
9	323-1200	21	Pin, Contact
10	323-1527-01	1	Connector, Plug (P6)
11	323-1527-02	1	Connector, Plug (P5)

Generator Harness (KY Spec B-F)

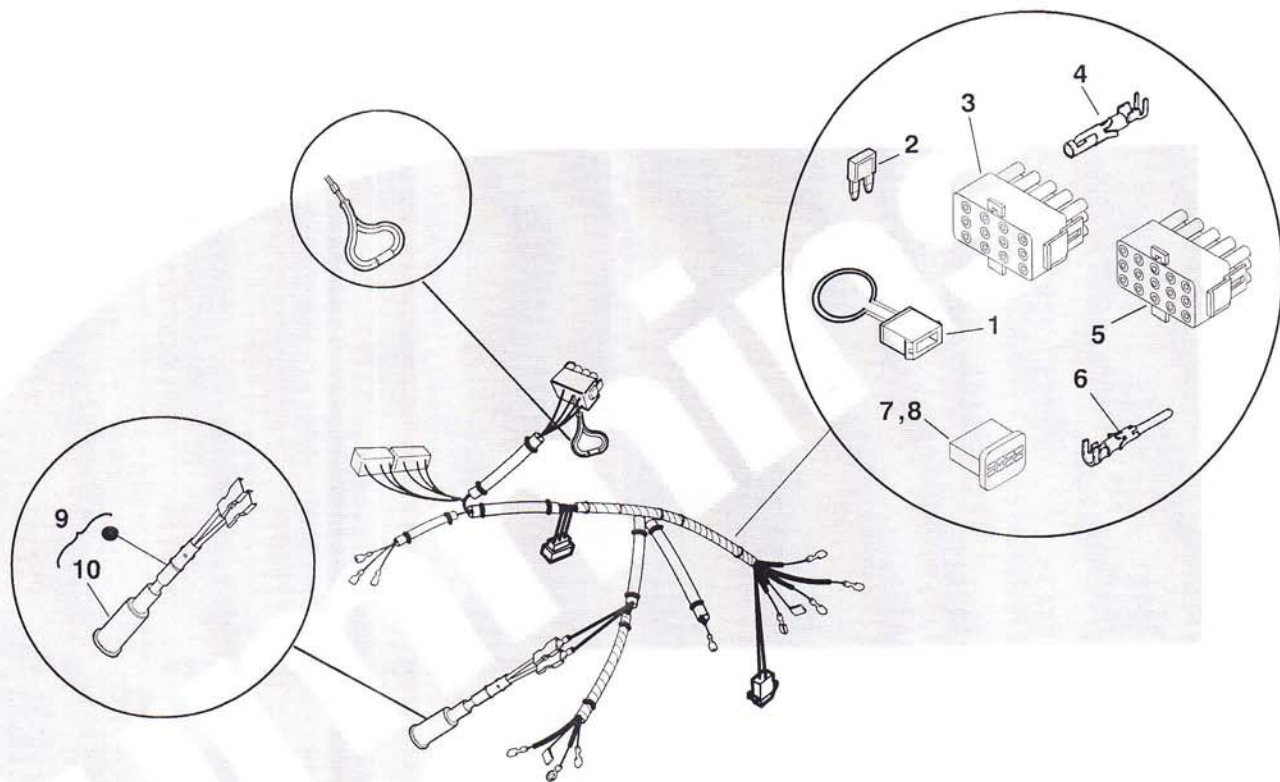

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Harness, Generator
			60 Hz
			Gasoline
338-3022-01	1		120 Volt (Includes Parts Marked *)
			100Volt
338-3123-01	1		Isolated Neutral (Includes Parts Marked * and +)
338-3379-01	1		Grounded Neutral (Includes Parts Marked * and +)
338-3022-02	1		LP (Includes Parts Marked *)
			50 Hz (Includes Parts Marked * and ♦)
			Gasoline
338-3023-01	1		LP
338-3023-02	1		
1 321-0312-02	1		*Fuse Assy (F1) (Includes

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			5A Fuse)
2	321-0307-03	1	*Fuse, 5A (F1)
3	323-1314	1	*Connector, Plug (12 Pin)(P4)
4	323-1199	12	*Pin, Contact
5	323-1253	1	*Cap, Circuit (15 Pin)(J1)
6			*Socket, Contact
	323-1200	9	120V, 220V
	323-1200	7	100V
7	323-1527-01	1	*Connector, Plug (P6)
8	323-1527-02	1	*Connector, Plug (P5)
9	338-2807	1	♦+Harness, Splitter (Includes Boot)
10	167-1636	1	Boot, Insulating


* - Parts Included with all Harnesses

+ - Parts Included in 100V, Isolated Neutral Harness

• - Part Included in 100V, Grounded Neutral Harness

♦ - Part Included in 50Hz Harnesses.

Generator Harness (KY Spec G-H)

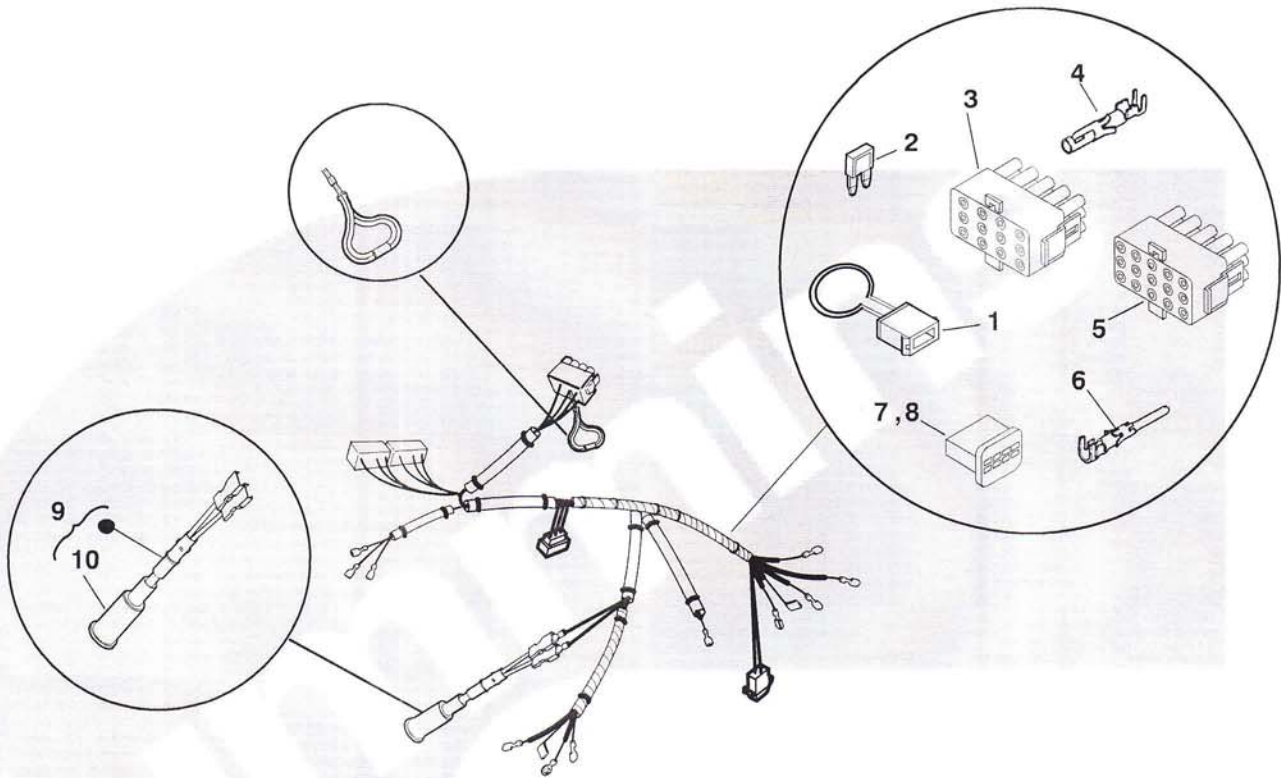

REF
NO.

PART
NO.

QTY
USED

PART
DESCRIPTION

REF
NO.

PART
NO.

QTY
USED


PART
DESCRIPTION

			Harness, Generator
			60 Hz
			Gasoline
338-3639-01	1		120 Volt (Includes Parts Marked *)
			100 Volt
338-3641-01	1		Isolated Neutral (Includes Parts Marked * and +)
338-3638-01	1		Grounded Neutral (Includes Parts Marked * and ➔)
338-3639-02	1		LP (Includes Parts Marked *)
			50 Hz
			Gasoline
338-3640-01	1		230 Volt (Includes Parts Marked * and ♦)
338-3661-01	1		100 Volt (Includes Parts Marked * and +)
			LP
338-3640-02	1		230V (Includes Parts Marked * and ♦)
338-3661-02	1		100 Volt (Includes Parts Marked *

			and +)
1	321-0312-02	1	*Fuse Assy (F1) (Includes 5 Amp Fuse)
2	321-0307-03	1	*Fuse, 5 Amp (F1)
3	323-1314	1	Connector, Plug (12 Pin)(P4)
4	323-1199	12	*Pin, Contact
5	323-1253	1	*Cap, Circuit (15 Pin)(J1)
6			*Socket, Contact
	323-1200	9	120V, 220V
	323-1200	7	100V
7	323-1527-01	1	*Connector, Plug (P6)
8	323-1527-02	1	*Connector, Plug (P5)
9	338-2807	1	♦+Harness Assy, Splitter (Isolated Neutral Harnesses only. Includes Boot)
10	167-1636	1	Boot, Insulating

- * - Parts Included with all Harnesses
- + - Parts Included with 100V, Isolated Neutral Harness.
- - Part Included in 100V, Grounded Neutral Harness
- ♦ - Part Included in 50Hz Harness.


Engine Harness (KY Begin Spec J and KYD)

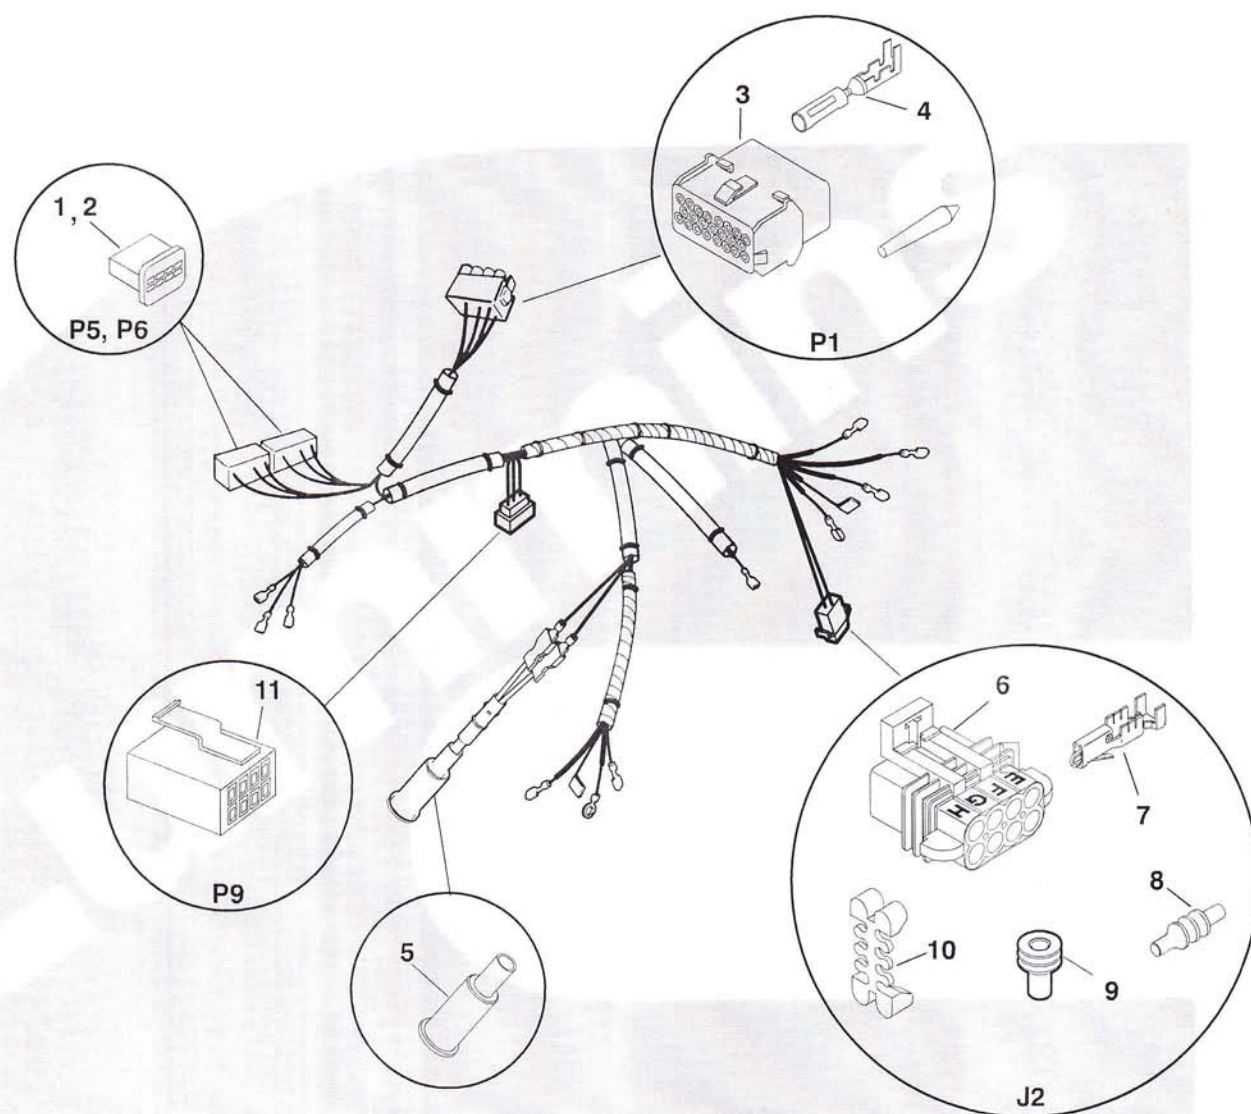

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Harness, Engine
			60 Hz
			Gasoline
	338-3813	1	100 Volt
	338-3812	1	120 Volt
			LP
	338-3813	1	50 Hz
1	323-1527-01	1	Connector, Plug (P6)
2	323-1527-02	1	Connector, Plug (P5)
3	323-1605-01	1	Connector, Plug (P1) (23 Pin)


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
4	323-1614-01	AR	Socket, Terminal (P1)
5	167-1636	1	Boot, Insulating (Not Used on 338-3812)
6	323-1743	1	Connector, Plug (J2)(8 Pin)
7	323-1709	7	Terminal, Socket (J2)
8	323-1712	1	Plug, Cavity (J2)
9	323-1708	7	Seal, Cable (J2)
10	323-1741	1	Housing, Lock (J2)
11	308-1019	1	Connector, Switch (P9)

Extension/Pigtail Harness (KY Spec B-E)

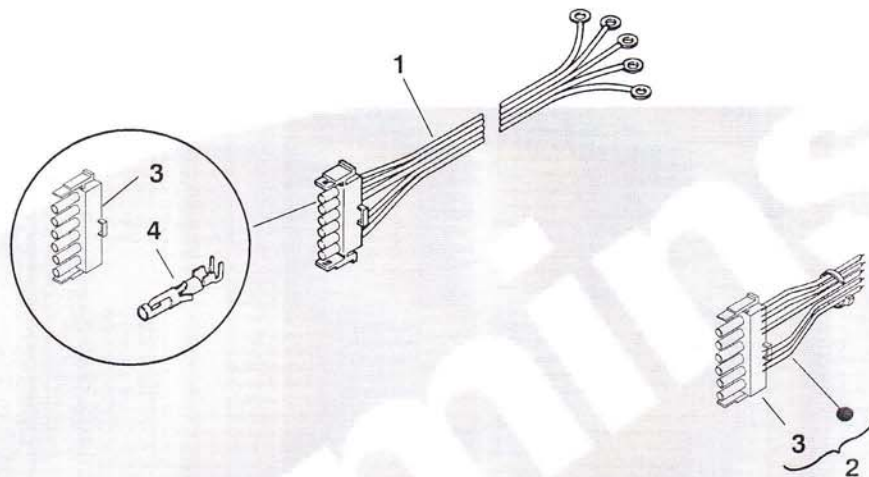

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Extension (Reaches from Genset to Remote Panel) (Includes Housing and Pins)	3	323-1304	1	Housing, Connector
	338-2260-01	1	Ten Feet Long	4	323-1199	5	Pin, Contact
	338-2260-02	1	Thirty Feet Long				
2	338-2046	1	Harness, Pigtail (6") (Reaches from Genset Harness to Customer Hookup) (Includes Connector Housing)				

Extension/Pigtail/Adapter Harness (KY Spec F-H and KYD)

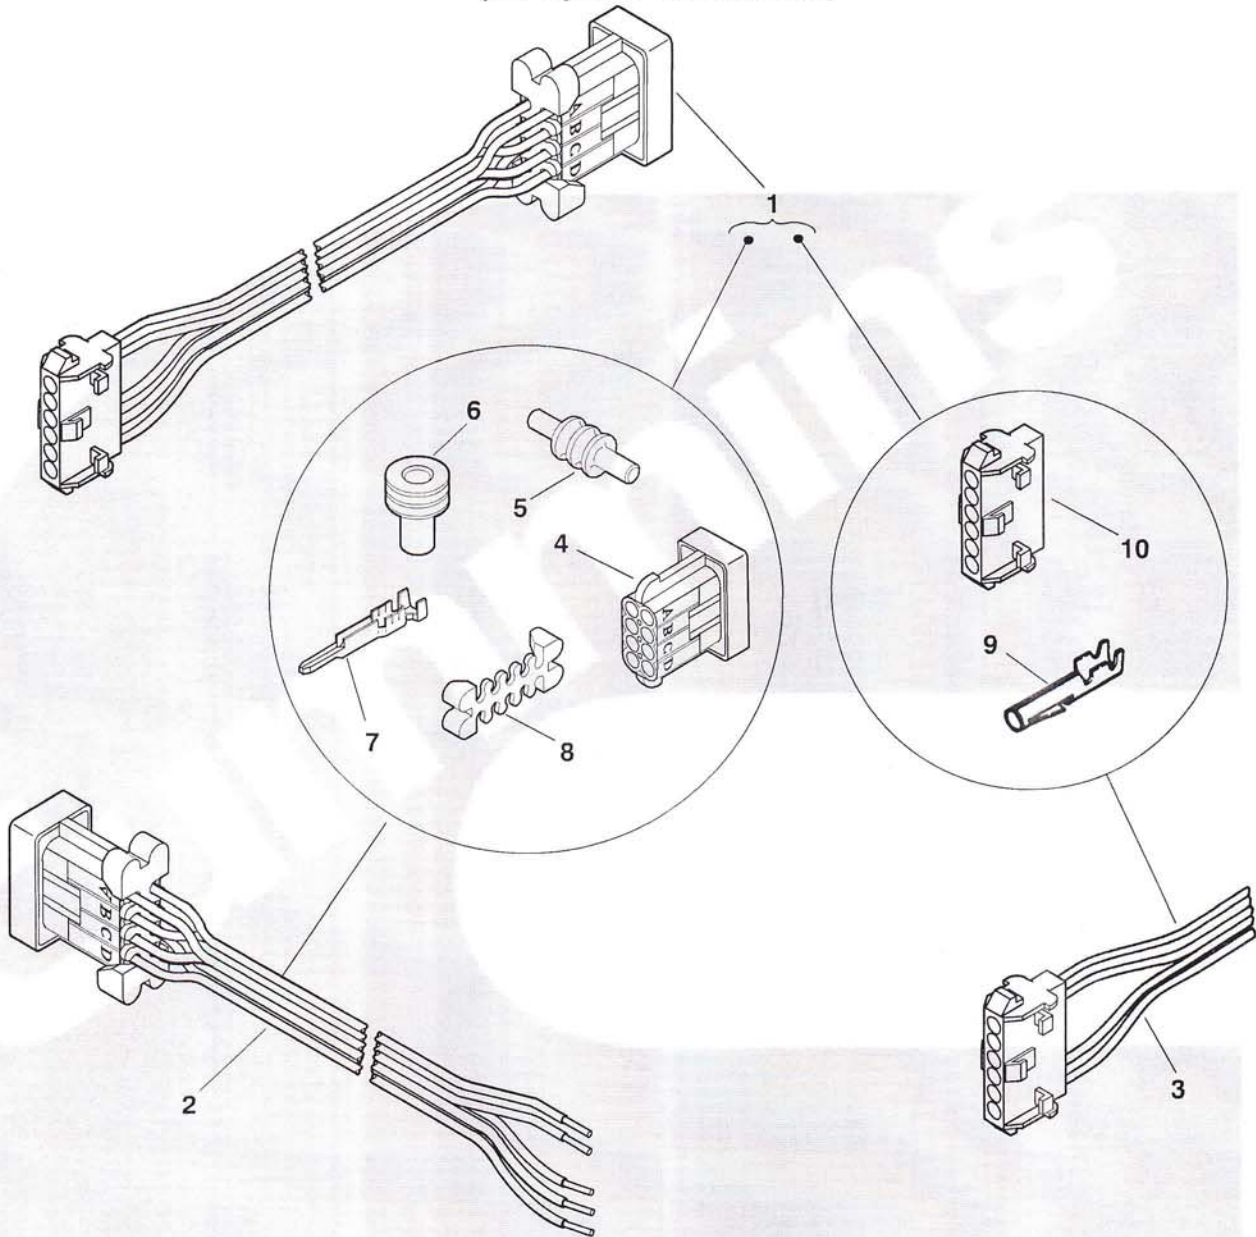

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Extension (Reaches from Genset Harness to Remote Panel) (Includes Parts Marked +)
	338-3489-01	1	10'
	338-3489-02	1	30'
2	300-4946	1	Harness, Customer Interface Pigtail (Reaches from Genset Harness to Customer Hookup or Remote Panel [with use of Following Adapter Harness]) (Includes Parts Marked *)


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
3	338-3572	1	Harness, Adapter (Reaches from Remote Panel to Pigtail Harness) (Includes Parts Marked #)
4	323-1744	1	+*Connector, Receptacle (8 Pin)
5	323-1712	3	+*Plug, Cavity
6	323-1708	5	+*Seal, Cable
7	323-1707	5	*Pin, Contact
8	323-1741	1	+*Housing, Lock
9	323-1200	1	+ #Socket, Contact
10	323-1342	1	+ #Cap, Connector

+ - Parts Included in Extension Harness.

* - Parts Included in Customer Interface Pigtail Harness.

- Parts Included in Adapter Harness.

Adapter Harness
(New to Old, Old to New)
(KY Spec F-H and KYD Spec A)

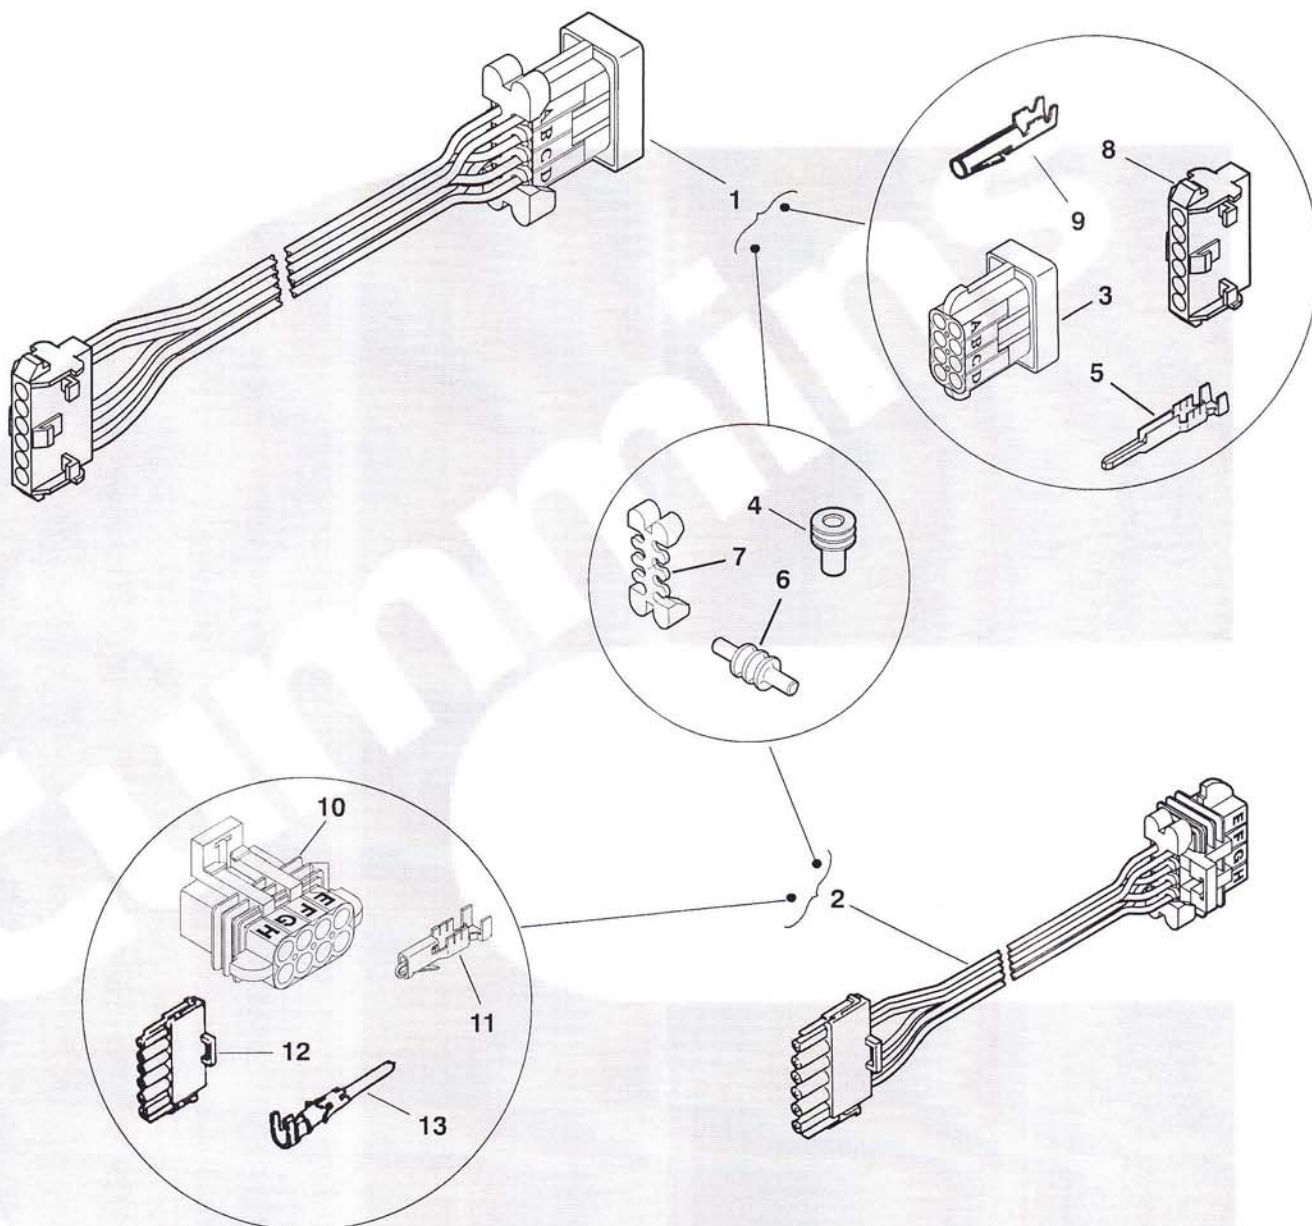


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338-3513	1	Harness, Remote Panel Adapter (6") (Reaches from New Genset to Old Panel) (Includes Parts Marked *)
2	338-3514	1	Harness, Remote Panel Adapter (6") (Reaches from Old Genset to New Panel) (Includes Parts Marked +)
3	323-1744	1	*Connector, Receptacle (8 Pin)
4	323-1708	5	+*Seal, Cable
5	323-1707	5	*Pin, Contact
6	323-1712	3	+*Plug, Cavity
7	323-1741	1	+*Housing, Lock

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
8	323-1342	1	*Cap, Connector (6 PI)
9	323-1200	1	*Socket, Contact
10	323-1743	1	+Connector, Plug (8 Pin)
11	323-1709	5	+Socket, Terminal
12	323-1304	1	+Cap, Connector (6 PI)
13	323-1199	5	+Pin, Contact

* - Parts Included in Remote Panel Adapter Harness (New Genset to Old Panel).

+ - Parts Included in Remote Panel Adapter Harness (Old Genset to New Panel).


Remote Control Panel (KY Spec B-E)

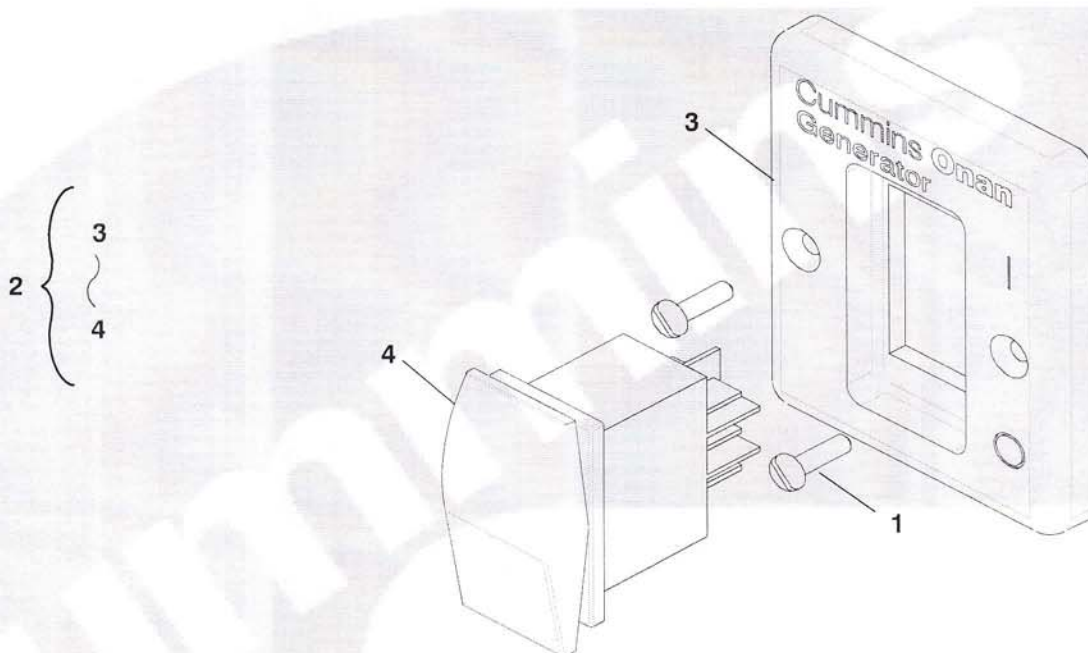

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	300-4936	1	Kit, Remote Panel
1	815-0910	2	Screw, Oval Head Wood
2	300-4953-01	1	Panel Assy, Remote (Includes Switch and Panel)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
3	319-6987-02	1	Panel, Printed
4	308-1062	1	Switch, Start/Stop (S1)

Remote Control Panel (Switch Only)

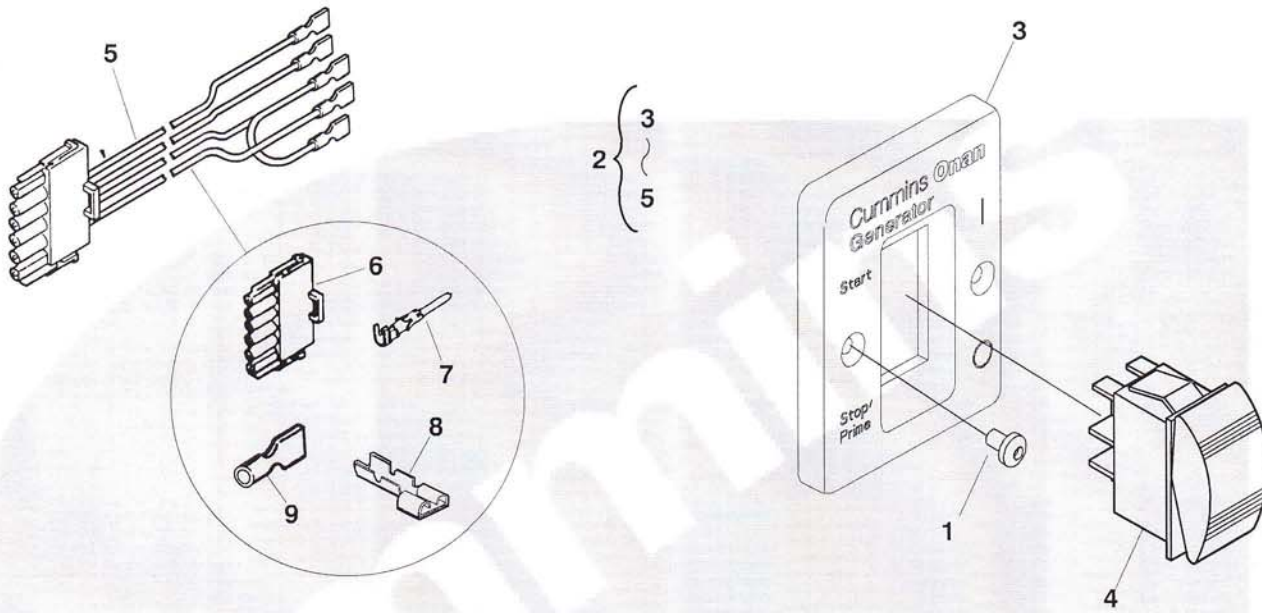


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	300-5331	1	Kit, Remote Panel (Switch Only)
1	815-0910	2	KY Begin Spec J and KYD
2			Screw, Wood (#6 x 1")
			Panel Assy, Remote (Includes Parts Marked ^)
	300-4953-04	1	KY Begin Spec J and KYD
3			^Panel, Printed
	319-6987-01	1	KY Spec F-H
	319-6987-03	1	KY Begin Spec J and KYD
4	308-1062	1	^Switch, Start/Stop
5	338-3510	1	^Harness, Remote Panel

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			(Reaches from Remote Panel to Extension Harness)
			(Includes Parts Marked #)
6	323-1304	1	#Plug, 6-Pin
7	323-1199	4	#Pin, Contact
8	332-0529	3	#Terminal, Receptacle (.25)
9	332-0529	2	#Terminal, Receptacle (.25)

^ - Parts Included in Remote Panel Assy.

- Parts Included in Remote Panel Harness.

Remote Control Panel (Switch and Hourmeter))

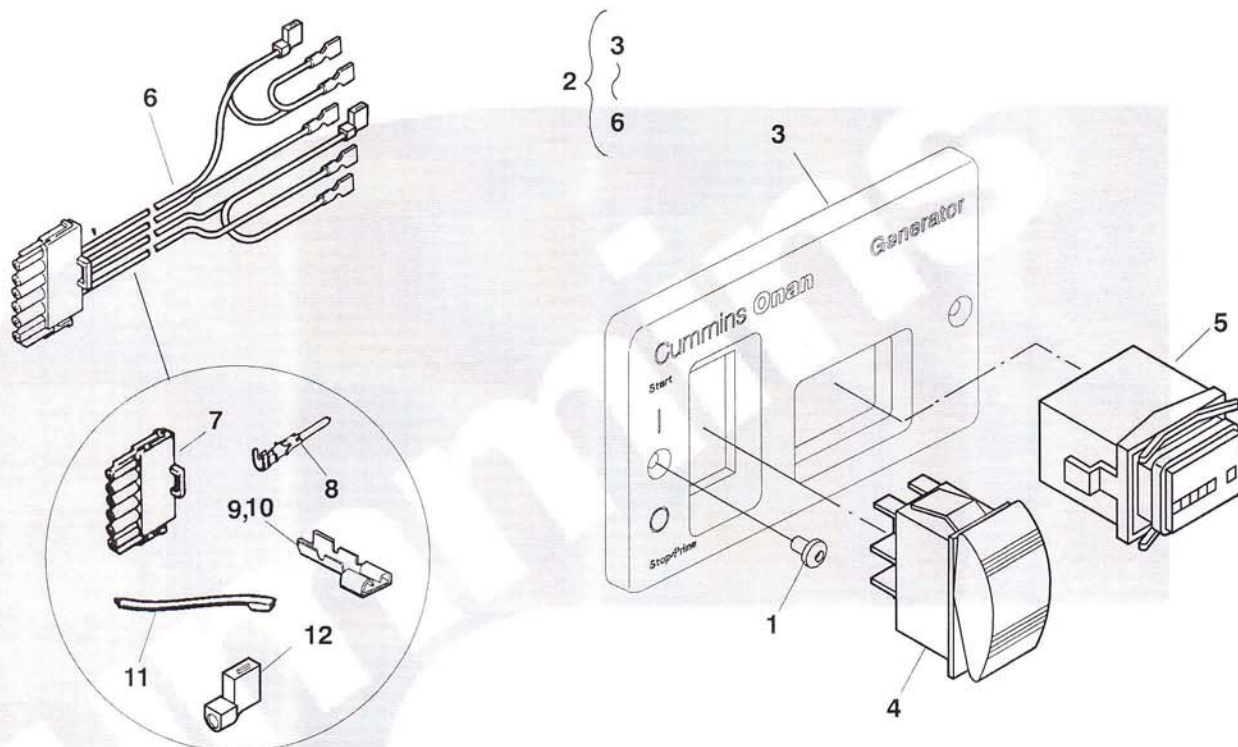


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	300-5332	1	Kit, Remote Panel (Switch and Hourmeter)
1	815-0910	2	KY Begin Spec J and KYD
2			Screw, Wood (#6 x 1")
	300-4951-04	1	Panel Assy, Remote (Includes Parts Marked ^)
3			KY Begin Spec J and KYD
	319-6988-03	1	^Panel, Printed
	319-6988-05	1	KY Spec F-H
4	308-1062	1	KY Begin Spec J and KYD
5	302-2002	1	^Switch, Start/Stop
6			^Meter, Hour
	338-3896	1	^Harness, Remote Panel
			(Reaches from Remote Panel to Extension Harness)
			(Includes Parts Marked #)
7	323-1304	1	KY Begin Spec J and KYD
			#Plug, 6-Pin

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
8	323-1199	4	#Pin, Contact
9	332-0529	4	#Terminal, Receptacle (.25)
10	332-0529	1	#Terminal, Receptacle (.25)
11	332-0942	AR	#Tie, Cable
12	332-2571	1	#Terminal, Receptacle (90°)
			(KY Begin Spec J and KYD)

^ - Parts Included in Remote Panel Assy.

- Parts Included in Remote Panel Harness.

Remote Control Panel (Switch and Voltmeter)

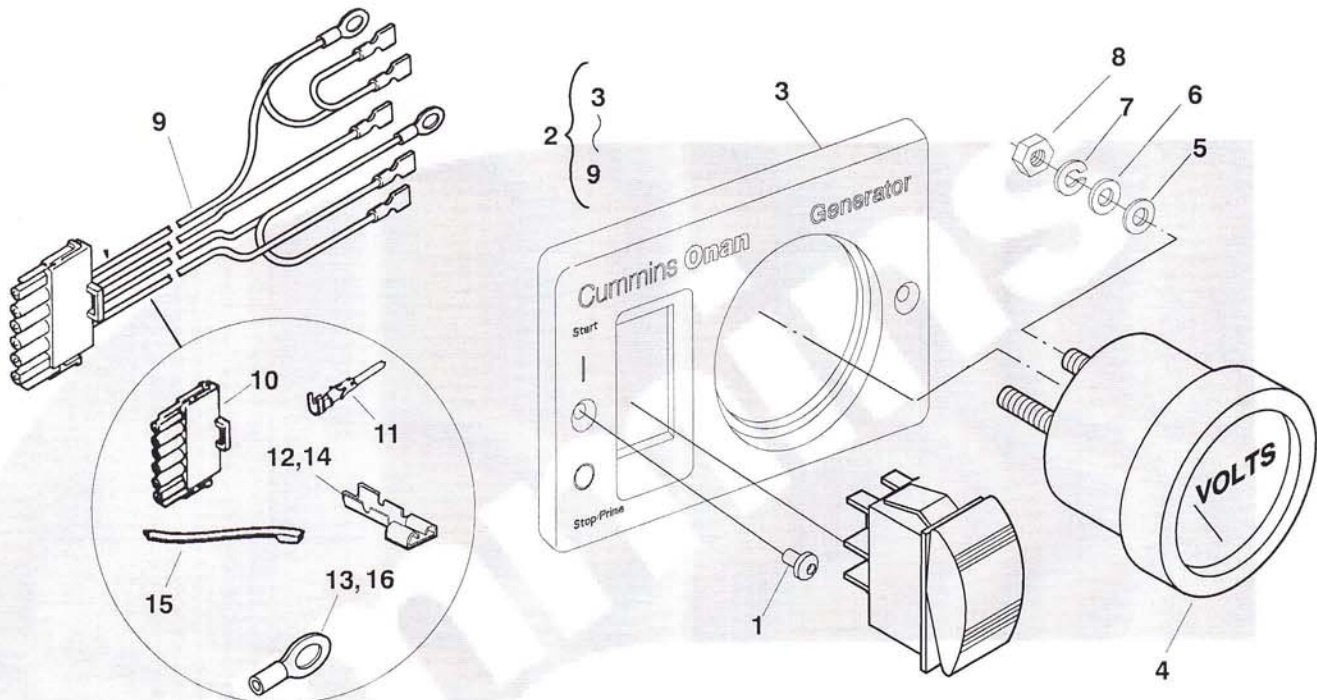

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	300-5333	1	Kit, Remote Panel (Switch and Voltmeter)
1	815-0910	2	Screw, Wood (#6 x 1")
2			Panel Assy, Remote (Includes Parts Marked ^)
	300-4952-04	1	KY Begin Spec J and KYD
3			^Panel, Printed
	319-6989-04	1	KY Begin Spec J and KYD
4	302-1641	1	^Meter, Volt
5	526-0409	2	^Washer, Nylon Flat (#10)
6	526-0049	4	^Washer, Brass Flat (#10)
7	850-0030	2	^Washer, Lock (#10)
8	871-0010	4	^Nut, Hex Brass Machine (#10-32)
9			^Harness, Remote Panel (Reaches from Remote Panel to Extension Harness) (Includes Parts Marked #)
10	323-1304	1	#Plug, 6-Pin
11	323-1199	4	#Pin, Contact
12	332-0529	3	#Terminal, Receptacle (.25)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
13	332-0807	2	#Terminal, Ring (#10)
14	332-0529	5	#Terminal, Receptacle (.25)
15	332-0942	AR	#Tie, Cable
16	332-0147	1	#Terminal, Ring (#10) (KY Begin Spec J and KYD)

^ - Parts Included in Remote Panel Assy.
- Parts Included in Remote Panel Harness.

+ - Labels Included in 120V/60Hz Control Labels Assy.
↓ - Labels Included in 100V/60Hz Control Labels Assy.
> - Labels Included in 50Hz Control Labels Assy.
* - Labels Included in 120V/60Hz Label Pkg.
• - Labels Included in 100V/60Hz Label Pkg.
- Labels Included in 50Hz Label Pkg.

Kits, Paint

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	155-2883	1	Kit, Tailpipe Hanger – Includes the Following:		305-0979	1	Kit, Remote Adapter
	155-2860	1	Insulator, Exhaust		323-1708	2	Seal, Cable
	155-2861	2	Clamp, Exhaust		300-4946	1	Harness, Remote
	800-0031	2	Screw, Hex Head Cap (5/16-18 x 1-1/2")		332-3582	5	Splice, Thermal
	155-2859	3	Backplate, Exhaust		168-0213	1	Kit, Gasket – Includes the Following:
	800-0026	1	Screw, Hex Head Cap (5/16-18 x 3/4")		101-0788	1	Gasket, Bearing Plate
	862-0015	2	Nut, Hex (5/16")		102-1412	1	Gasket, Oil Base
	155-2887	1	Kit, Exhaust Elbow – Includes the Following:		110-3893	1	Gasket, Cylinder Head
	155-2886	1	Elbow, Exhaust Adapter		110-3861	1	Gasket, Valve Cover
	155-1256	1	Clamp		140-2586	1	Gasket, Air Cleaner
					145-0695	1	Gasket, Carburetor Flange
					146-0531	1	Gasket, Insulator
					146-0533	1	Gasket, Carburetor
					154-2816	1	Gasket, Exhaust
	541-0525	1	Kit, Set Mounting – Includes the Following:		154-2821	1	Gasket, Intake Elbow
	403-4142-02	1	Bracket, Set Mounting		155-2677-01	1	Gasket, Resonator
	402-0748	4	Isolator, Set		525-0305	–	Paint, Enamel Green (13 oz. Pressurized Spray Can)
	526-0333	4	Washer, Flat				
	800-0033-01	4	Screw, Hex Head Cap (5/6-18 x 2")				

Labels

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Labels, KY Spec A-J				Labels, Control Panel (KY Begin Spec J and KYD)			
98-6539-01	1		Label, Caution (Hot Exhaust Pipe) (Spec A)	98-7634-03	1		60Hz 120V (Includes Labels Marked +)
98-6783	1		Label, Control (Stop/Start/ Amp) (120V Sets)(Spec B-H)	98-7634-01	1		100V (Includes Labels Marked ⚡)
98-6762	1		Label, Important (Service Door)	98-7634-02	1		50Hz (Includes Labels Marked >)
98-4240	1		Label, Kit Number	98-6477	1		Label, Caution (Recirculating Hot Air)
			Label, Model Identification				Label, Circuit Breaker
			Spec A-H				⚡ 17A, 2 Pole
98-6288-01	1		MicroLite 4000	98-7634-01	1		⚡ Label, Caution (Recirculating Hot Air 60 Hz)
98-6288-02	1		MicroLite 3600	98-6540-01	1		# Label, Charger Leads (Disconnect Leads) (50 Hz and 100V/60Hz)
98-6288-03	1		MicroLite 3600LP	98-6805	1		# Label, Charger (Disconnect Leads) (50 Hz and 100V/60Hz)
98-6288-04	1		MicroLite 3300LP	98-6806	1		# Label, Charger (Disconnect Leads) (50 Hz and 100V/60Hz)
			Begin Spec J	98-6518-01	1		# Label, Control (Amperage) 5A (50 Hz and 100V/60Hz KY Spec B-H and KYD)
98-7620-01	1		MicroQuiet 4000				⚡ Label, Decal Kit
98-7620-02	1		MicroQuiet 3600				⚡ Label, Warning (Exhaust Gas/Combustion Source 60 Hz)
98-7620-03	1		MicroQuiet 3600LP				Label, Logo
98-7620-04	1		MicroQuiet 3300LP				RV QG 4000
98-6756-01	1		Label, Service Panel (Closed Right) (Spec A)				RV QG 4000 EVAP
98-6756-02	1		Label, Service Panel (Closed Left) (Spec A)				RV QG 3300 LP
			Label, Warning (Installation Clearance)				RV QG 3600
98-6289	1		Spec A	543-0018-02	1		
98-6526-01	1		Spec B-H	98-6434	1		
98-7640-01	1		Begin Spec J				
98-7282-03	1		# Label Pkg	98-8752	1		
98-7282-03	1		# Label Pkg	98-8759	1		
			Label, Control (Amperage)	98-8760	1		
98-6518-02	1		# 15A (50 Hz Sets)	98-8761	1		
98-7282-02	1		• 20A (100V/60Hz)				
98-7282-03	1		# Label Pkg				
98-7282-03	1		# Gas/Combustion Source 50 Hz)				
98-7282-03	1		# Label Pkg (Rotating Fan 50 Hz)				
98-6859	1		Label, Warning				
			Label Pkg				
			60Hz				
98-7282-01	1		120V (Includes Labels Marked *)				
98-7282-02	1		100V Includes Labels Marked ⚡				
Labels, KY and KYD				Labels, KYD			
							Label, Logo
				98-8087-01	1		Camp Power 4000
				98-8087-02	1		Camp Power 3600
				98-8087-03	1		Camp Power 3300
				98-7624	1		Label, Control
				98-8159	1		Label, Warning (Installation Clearance)

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
098-4240, 74		098-8761, 74		110-3890, 10 , 11		140-2609, 29	
098-6288-01, 74		100-4152, 10 , 11		110-3892, 10 , 11		140-2771-01, 19 , 21 , 25 , 27	
098-6288-02, 74		101-0787, 16		110-3893, 10 , 11 , 73		140-2820-01, 31	
098-6288-03, 74		101-0788, 16 , 73		110-3914, 10 , 11		140-2855, 31	
098-6288-04, 74		102-1412, 33 , 34 , 35 , 73		110-3922-01, 10 , 11		140-3280, 31	
098-6289, 74		102-1444, 34 , 35		110-3922-02, 10 , 11		140-3295, 31	
098-6434, 74		102-1456-02, 45		110-3972, 28		145-0561, 29	
098-6477, 74		104-1721-01, 12 , 13		110-4035, 11		145-0615, 29	
098-6518-01, 74		104-1721-02, 12 , 13		110-4036, 11		145-0617, 19 , 23	
098-6518-02, 74		104-1721-03, 12 , 13		112-0253, 13		145-0619, 57	
098-6526-01, 74		104-1721-05, 12 , 13		112-0255, 12 , 13		145-0689, 60 , 61	
098-6539-01, 74		104-1721-07, 12 , 13		112-0290, 12 , 13		145-0695, 19 , 21 , 23 , 25 , 27 , 73	
098-6540-01, 74		104-1721-08, 12 , 13		112-0291, 12		145-0705-02, 19 , 21 , 25 , 27	
098-6756-01, 74		104-1780, 12		114-0366, 12		146-0530, 19 , 21 , 23 , 25 , 27	
098-6756-02, 74		104-1896-02, 14 , 15 , 16		114-0373, 12		146-0531, 19 , 21 , 23 , 25 , 27 , 73	
098-6762, 74		104-1896-04, 14 , 15 , 16		115-0463, 14		146-0532, 19 , 21 , 23 , 25 , 27	
098-6769, 31		104-1896-05, 14 , 15 , 16		115-0465, 10 , 11		146-0533, 19 , 21 , 23 , 25 , 27 , 73	
098-6783, 74		104-1899, 12		115-0471, 14 , 15		146-0534, 19	
098-6805, 74		104-1901, 12		115-0472, 10 , 11		146-0646, 19	
098-6806, 51 , 74		104-1902, 16		115-0496, 10 , 11		146-0651, 19	
098-6859, 74		104-2130, 16		115-0497, 10 , 11		146-0668, 25	
098-7282-01, 74		104-2133, 13		115-0542, 15		146-0722, 23 , 25	
098-7282-02, 74		105-0681, 14		120-1264, 12 , 13		146-0743, 19	
098-7282-03, 74		105-0724, 14		123-1917, 10 , 11 , 27		146-0759, 19	
098-7620-01, 74		105-0754, 15		123-1920, 10 , 11		146-0765, 19 , 21	
098-7620-02, 74		110-3698, 10 , 11		123-1944-01, 33		146-0783, 19 , 21	
098-7620-03, 74		110-3700, 10 , 11		123-1953, 33		146-0784, 21	
098-7620-04, 74		110-3701, 10 , 11		123-2015, 34 , 35		146-0785, 19	
098-7624, 74		110-3743, 10 , 11		123-2397, 28		146-0803, 21	
098-7634-01, 74		110-3750, 10		134-4918, 57		146-0829, 27	
098-7634-02, 74		110-3750-03, 10 , 11		134-4919-01, 32		146-0881, 21	
098-7634-03, 74		110-3751-00, 10		134-5029, 31		148-0985-02, 23 , 25	
098-7640-01, 74		110-3751-01, 10		134-5031, 31		148-1013, 23 , 25	
098-8087-01, 74		110-3861, 10 , 11 , 73		134-5032, 31		148-1264-02, 27	
098-8087-02, 74		110-3882, 10 , 11		134-5119, 32		148-1265-02, 27	
098-8087-03, 74		110-3887, 10		134-5213, 31			
098-8159, 74		110-3888, 10		140-2536-06, 21 , 27 , 31			
098-8752, 74				140-2576, 29			
098-8759, 74				140-2586, 19 , 23 , 73			
098-8760, 74							

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
148-1266, 27		155-2449, 41		191-1798, 30		300-4953-04, 70	
148-1341-02, 28		155-2675, 42		191-2351, 30, 57		300-5331, 70	
149-2311-01, 19		155-2676, 42		201-3538-S0, 57, 59		300-5332, 71	
149-2457, 19, 21		155-2677-01, 42, 73		201-3539-S0, 59		300-5333, 72	
149-2523, 23, 25, 27		155-2678, 36		201-3539-S1, 59		302-1641, 72	
150-2273, 15		155-2682, 42		204-0141, 57, 59		302-2002, 71	
150-2302, 14		155-2683-02, 36		205-0199-S0, 57, 59		303-0275, 57, 60	
150-2305, 14		155-2715, 42		205-0263, 59		303-0303, 57	
150-2390, 17		155-2783, 37		211-0437, 29		303-0308-01, 60	
150-2391, 17		155-2844-S0, 41		211-0460, 30		303-0331, 61	
150-2392, 17		155-2844-S1, 41		211-0497, 30		303-0332, 61	
150-2393, 17		155-2845, 41		211-0497-01, 30		304-0794, 62	
150-2394, 17		155-2847, 41		212-1276-03, 29, 30		304-0796, 57	
150-2395, 17		155-2850, 41		212-1282-S0, 29, 30		305-0784, 51	
150-2396, 17		155-2859, 41, 73		212-1283-S0, 29, 30		305-0851, 29, 45	
150-2398, 17		155-2860, 41, 73		214-0103, 29, 30		305-0866, 29, 45	
150-2401, 17		155-2861, 41, 73		220-4485-04, 59		305-0935, 62	
150-2448, 17		155-2883, 73		220-4485-S1, 57, 59		305-0979, 73	
150-2465, 14		155-2886, 73		220-4485-S3, 57, 59		307-2501, 23	
150-2466, 14		155-2887, 73		220-4485-S5, 59		307-2586, 42, 45, 47	
150-2549-02, 17		155-3263, 41		220-4490-S1, 59		307-2795-02, 23	
150-2604, 14, 15		155-4046, 39		220-4572-01, 57, 59		307-2831-02, 23, 25	
150-2754, 15		155-4063, 39		220-4572-02, 59		307-2997-02, 23, 25, 27	
153-0638-01, 19, 21		155-4084, 39		220-4572-03, 59		307-3079, 23, 25, 27	
153-0639, 21		160-1358-S0, 29, 30		220-4586-02, 59		308-0852, 60	
<i>See also</i>		166-0784-S0, 57		220-4586-11, 59		308-0968, 62	
153-0640, 19, 21		166-0818, 60		220-4586-S1, 59		308-0969, 57	
153-0641, 29		166-0866, 30		226-4297, 30, 57		308-1019, 65	
153-0651-02, 19, 21		167-0265, 57		226-4795, 30		308-1038, 61	
153-0659, 19, 21		167-0267, 30, 57, 60		232-3720, 19, 21		308-1059, 33, 34	
153-0664, 31		167-0275, 10, 11		232-3881, 59		308-1062, 69, 70, 71	
154-2815-02, 19, 21, 23, 25, 27		167-0305, 10, 11		232-4030, 59		315-0735-03, 59	
154-2816, 36, 37, 38, 39, 73		167-1627, 30, 60		300-4155, 42		315-0736, 59, 61	
154-2818, 19, 21, 23, 25		167-1636, 63, 64, 65		300-4320, 45		319-1279-01, 42	
154-2821, 19, 21, 23, 25, 27, 73		168-0213, 73		300-4923, 45		319-1412, 57	
154-2975, 37		181-0489, 35		300-4936, 69		319-2152-03, 45	
155-1256, 41, 73		181-0490, 35		300-4946, 67, 73		319-2176-03, 60	
155-2174, 41		185-6826, 12		300-4951-04, 71		319-2213-03, 60	
		185-6828, 12		300-4952-04, 72		319-3811-02, 45, 47	
		185-7144, 10, 11		300-4953-01, 69			

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
319-3844-02, 61		331-0521, 42		338-3661-01, 64		405-5811-02, 45	
319-6987-01, 70		331-0539-02, 45 , 47		338-3661-02, 64		405-6383-01, 51	
319-6987-02, 69		331-0545, 45		338-3812, 65		405-6384-01, 48 , 51	
319-6987-03, 70		332-0147, 72		338-3813, 65		405-6384-02, 51	
319-6988-03, 71		332-0529, 70 , 71 , 72		338-3814, 61		405-6384-03, 51	
319-6988-05, 71		332-0807, 72		338-3815, 61		405-7552, 51	
319-6989-04, 72		332-0942, 42 , 62 , 71 , 72		338-3896, 71		405-7661, 47	
320-1323, 57 , 60 , 61		332-2571, 71		402-0640, 42		405-7662, 51	
320-1780-01, 57 , 60		332-2870-01, 71		402-0641, 42 , 45 , 47		406-0779, 48 , 51	
320-1780-02, 60 , 61		332-3108, 45 , 62		402-0664-01, 45 , 47		502-0047, 23 , 25 , 27	
320-1780-03, 60 , 61		332-3292, 51		402-0664-02, 45 , 47		502-0153, 33 , 34	
321-0307-03, 63 , 64		332-3582, 73		402-0675, 37 , 38		502-0395, 23	
321-0312-02, 63 , 64		337-2312, 29 , 31		402-0678, 37 , 38		502-1133, 23 , 25 , 27	
321-0312-S1, 62		337-3467, 31 , 47		402-0686-02, 45		502-1162, 23 , 25 , 27	
323-1199, 63 , 64 , 66 , 68 , 70 , 71 , 72		338-2046, 66		402-0748, 73		502-1200, 23	
323-1200, 62 , 63 , 64 , 67 , 68		338-2260-01, 66		403-3396-02, 52		502-1214, 23 , 25 , 27	
323-1252, 62		338-2260-02, 66		403-3581-04, 54		503-1351, 30	
323-1253, 63 , 64		338-2568-01, 62		403-3630, 55		503-1418, 23	
323-1304, 66 , 68 , 70 , 71 , 72		338-2568-02, 62		403-3631-02, 55		503-1533-03, 37 , 39	
323-1314, 62 , 63 , 64		338-2807, 63 , 64		403-3669-02, 52		503-1851, 10 , 11 , 23 , 25 , 27	
323-1342, 67 , 68		338-2909, 60		403-3672, 52 , 53		503-1951-09, 19 , 21	
323-1527-01, 62 , 63 , 64 , 65		338-3022-01, 63		403-4142-02, 73		503-2006, 23 , 25	
323-1527-02, 62 , 63 , 64 , 65		338-3022-02, 63		403-5135-02, 53		503-2015, 23 , 25 , 27	
323-1605-01, 65		338-3023-01, 63		405-4241, 55		503-2143-05, 27	
323-1614-01, 65		338-3023-02, 63		405-4305-01, 42		503-2289-06, 27	
323-1707, 67 , 68		338-3049, 60		405-4306, 42		503-2309, 27	
323-1708, 65 , 67 , 68 , 73		338-3123-01, 63		405-4307-02, 48		503-2735, 19 , 21	
323-1709, 65 , 68		338-3379-01, 63		405-4308, 48		503-2878, 28	
323-1712, 65 , 67 , 68		338-3489-01, 67		405-4311-01, 51		503-2879, 28	
323-1741, 65 , 67 , 68		338-3489-02, 67		405-4662-S0, 55		503-3069, 28	
323-1743, 65 , 68		338-3510, 70		405-4663-S0, 55		505-0071, 23 , 25 , 27	
323-1744, 67 , 68		338-3513, 68		405-4668-01, 55		505-1492-02, 34	
327-1413, 45 , 47		338-3514, 68		405-4755-02, 42		508-0055, 55	
331-0041, 42		338-3572, 67		405-4894, 51		508-0071, 55	
331-0115, 45		338-3638-01, 64		405-4895, 45		508-0208, 45 , 47	
331-0255, 45		338-3639-02, 64		405-4896, 31		508-0315, 42 , 45 , 47 , 48 , 51 , 52 , 53	
		338-3640-01, 64		405-4964-02, 45		508-0330, 45	
		338-3640-02, 64		405-4966, 51		508-0333, 47	
		338-3641-01, 64		405-4967-03, 51		508-1083-01, 42	


Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
508-1091, 45		526-0014, 45		800-0730, 42		823-0007-01, 29, 36	
508-1093-01, 45		526-0018, 29, 59, 60, 61		800-2012, 51		823-0007-02, 57, 59	
508-1116, 51		526-0029, 42		800-2031, 40		823-0008, 57	
508-1194, 39		526-0032, 45		800-2046, 19, 21, 23, 25, 27		823-0009-01, 31, 57	
509-0142, 33		526-0049, 72		800-2057, 37		823-0010-01, 48, 51	
509-0258, 12, 14		526-0113, 39		800-2058, 38		823-1002-01, 42, 51, 59	
509-0274-02, 29		526-0115, 39		800-3026, 10		823-1002-03, 19, 21, 23, 25, 27, 45, 60	
509-0282-02, 33		526-0122, 17, 52, 53, 54, 55		800-6373-03, 17		823-1002-04, 45	
509-0285, 57		526-0174, 52, 53, 54		813-0098, 55		823-1006-06, 37, 38	
509-0289, 10		526-0333, 73		815-0549, 60, 61		850-0030, 55, 72	
509-0305, 31		526-0392, 57, 59		815-0578, 32, 47, 61		850-0040, 30, 57	
509-0307, 34, 35		526-0394, 48, 51		815-0753, 61		850-0045, 42, 45, 47	
509-0308, 31		526-0409, 72		815-0778, 57, 59		853-0013, 60, 61	
509-0313, 30		526-0409, 72		815-0781, 30		856-0003, 51	
509-0421, 59		526-2077, 14		815-0785, 45, 47		856-0006, 23, 25, 27	
510-0160, 12, 13		526-2078, 14		815-0787, 57, 59		856-0008, 29, 31, 42, 45, 47, 55	
510-0163, 14, 15, 16		541-0508, 14		815-0829-01, 33, 34		860-2005, 19, 21	
510-0182, 12, 13, 15		541-0525, 73		815-0829-04, 59		862-0001, 30, 57	
510-0216, 57, 59		541-0540, 42, 45		815-0838-02, 31		862-0015, 41, 42, 45, 47, 73	
515-0289, 57, 59		541-0556-01, 51		815-0842-05, 45		865-0029, 31	
515-0293, 12		541-0916, 39		815-0874-01, 45, 47		868-0002, 42, 45, 47	
515-0305, 14		541-0938, 53		815-0910, 69, 70, 71, 72		870-0236, 36, 57	
516-0151, 29		541-1377, 27		815-0936, 59		870-0465, 17	
517-0103, 30		543-0018-02, 74		815-0943-02, 45, 47		870-0513-02, 52, 53	
517-0133, 57, 60		718-1039, 17		816-0101, 42		870-0557, 38, 39	
517-0305, 19, 21		720-1038, 57		818-0226-02, 51		870-2054, 45, 57, 61	
518-0515, 59		740-1002, 17		821-0004, 23, 25		870-2055, 36	
518-0576, 17		740-1004, 19, 21, 23, 25, 27		821-0005, 23, 25		870-2062, 51	
518-0581, 45, 51		740-1006, 57		821-0014, 52, 53		870-2159, 17, 19, 21, 23, 25, 27	
518-0617, 17		740-1008, 10		821-0018, 27, 31		870-2193-04, 37	
518-0623, 48		750-1006, 57		821-2046, 36		870-2198, 48, 51	
518-0649, 31		800-0017, 29		823-0002-04, 57, 60		871-0010, 72	
520-2215, 17, 37, 38, 39		800-0026, 39, 41, 52, 53, 54, 55, 73		823-0002-09, 29, 30		898-1196-24, 25, 27	
520-2216, 36, 37		800-0030, 45, 47		823-0003-01, 60		898-1314-05, 19, 21	
525-0305, 73		800-0031, 41, 73		823-0003-02, 27		A026N404, 28	
526-0003, 19, 21, 29, 30		800-0033-01, 73		823-0003-03, 57		A028V609, 11	
526-0009, 51		800-0048, 52, 53		823-0003-04, 29, 30		A028V611, 35	
526-0011, 37, 38		800-0049, 54		823-0003-06, 23, 25, 59, 60			
526-0012, 31							


Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
-----------------	-------------	-----------------	-------------	-----------------	-------------	-----------------	-------------

A028V752,	11						
A028V757,	13						
A028V775,	13						
A028X300,	15						
A028X304,	13						
A028X316,	13						
A028X412,	12 , 13						
A028X500,	11						
A028X507,	11						
A028X508,	11						
A028X512,	11						
A028X518,	11						
A028X528,	16						
A028X564,	35						
A029F889,	21						
A030J333,	40						
A030J339,	40						
A030J351,	40						
A030X652,	52 , 54						
A034F778,	38						
A034L017,	39 , 40						
A034T222,	38						
A035K028,	45						
A041D736,	21						
A041D744,	21						
A041G409,	40						
A041H375,	38						
A041L445,	40						
A041L448,	39						
A042P619,	21						

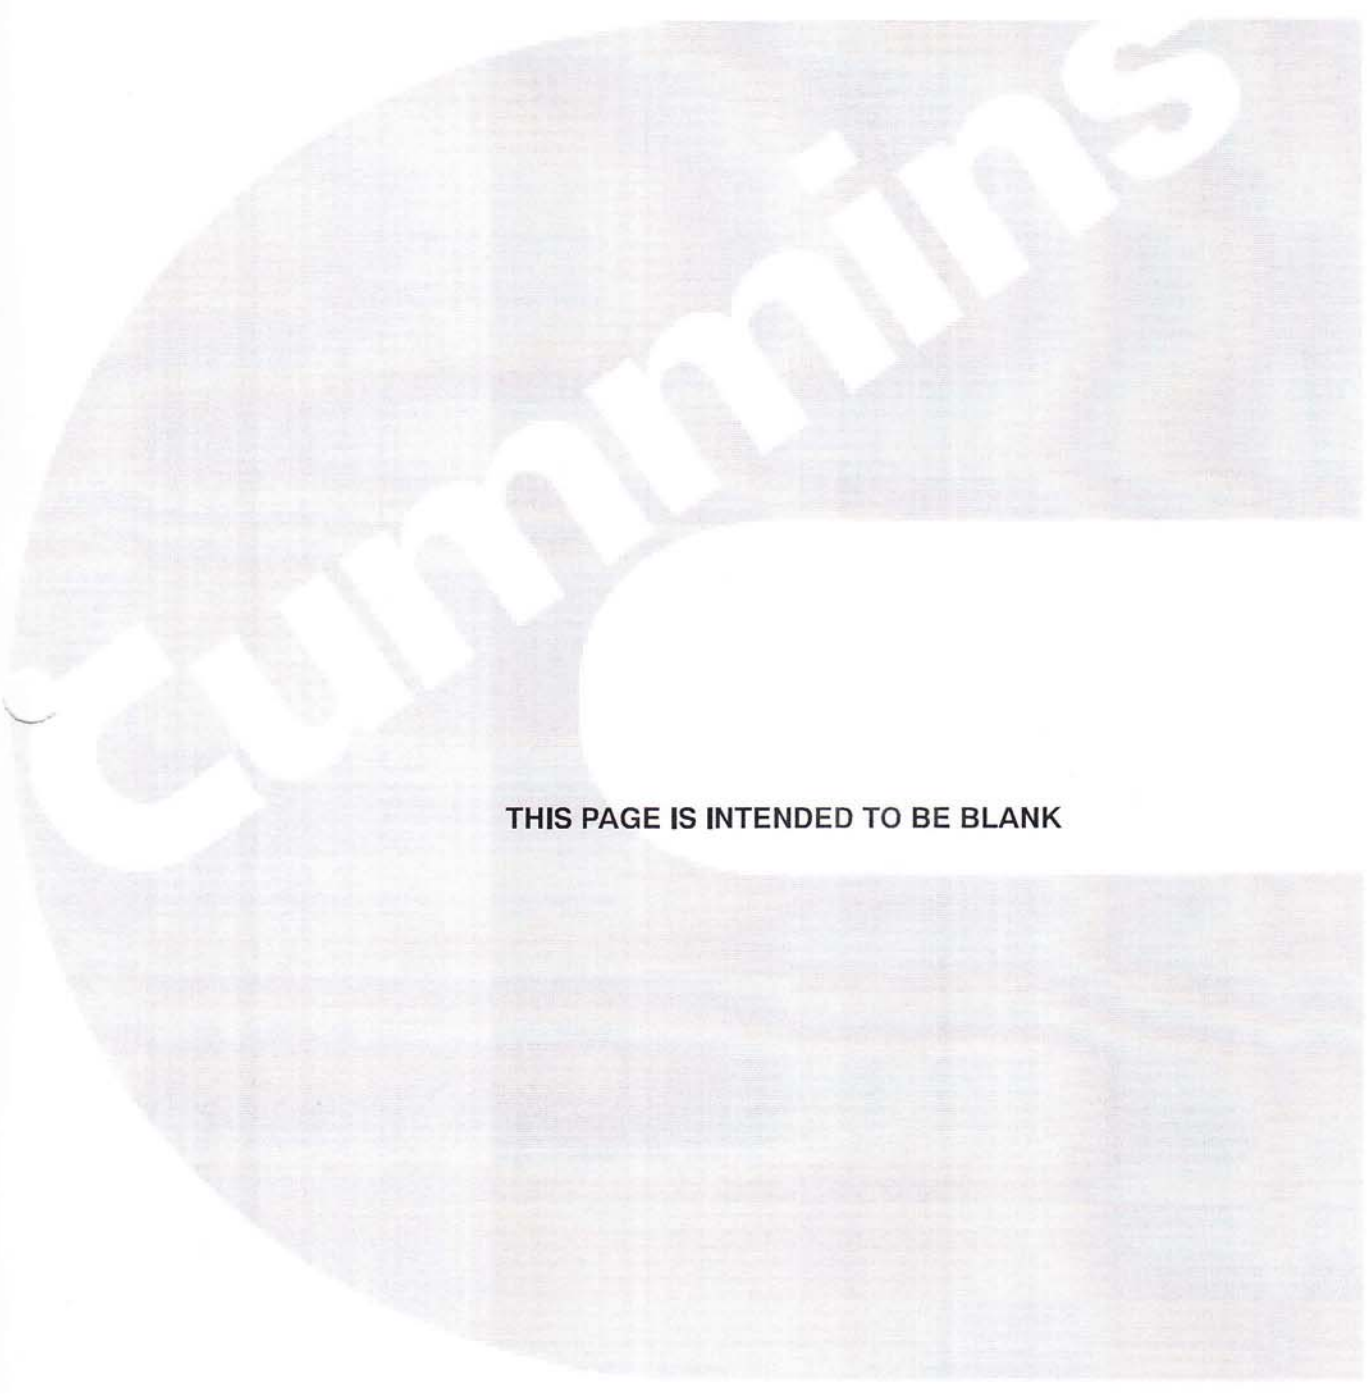

THIS PAGE IS INTENDED TO BE BLANK

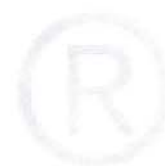

Cummins Onan

Cummins Power Generation

1400 73rd Ave. NE
Minneapolis, MN 55432 USA

Phone 1 763 574 5000

Toll-free 1 800 888 6626

Fax 1 763 574 5298

Email www.cumminsonan.com/contact
www.cumminsonan.com

Cummins®, Onan®, the "C" logo, and "Performance you rely on."
are trademarks of Cummins Inc.

© 2012 Cummins Power Generation, Inc. All rights reserved.



